




BLOSSOM®
luxury made simple

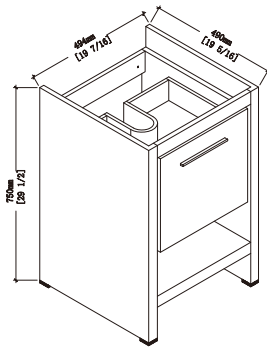


V8014-20

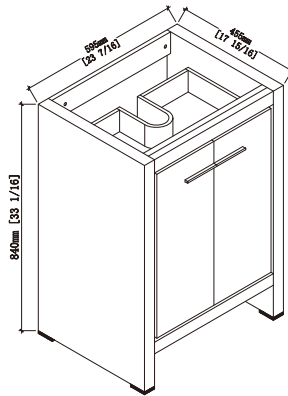


V8014-24

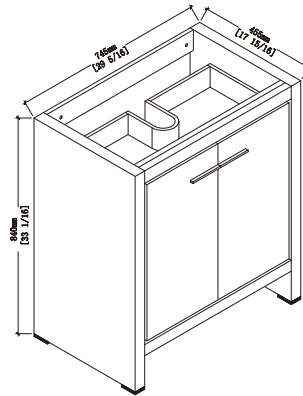


V8014-30

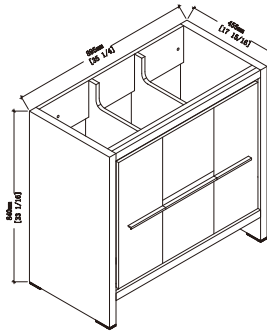

V8014-36

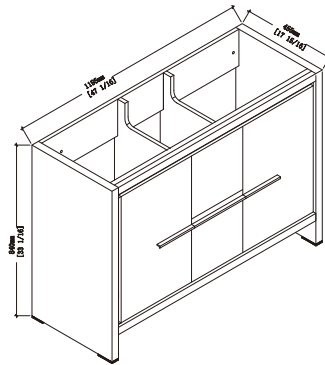

V8014-48

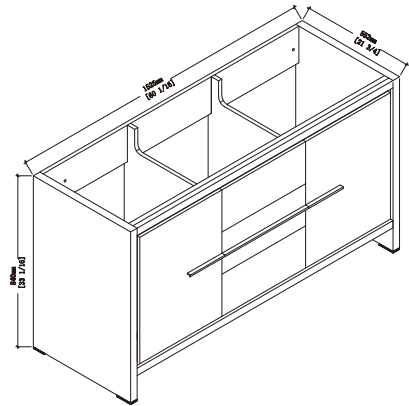

V8014-60

[MILAN]
Series Vanities
Specification & Installation Guide

Features

- Modern design with high glossy paint or silver grey melamine finishes.
- Soft-closing doors and drawers.
- Compatible ceramic basins or artificial stone basins.
- Compatible matching mirror, medicine cabinet or LED mirror, medicine cabinet.
- Full extension drawers.
- Easy installation

Package Dimension

20"	22 26/64" x 22 16/64" x 32 31/64"
24"	26 3/8" x 20 55/64" x 36 1/32"
30"	32 9/32" x 20 55/64" x 36 1/32"
36"	38 3/16" x 20 55/64" x 36 1/32"
48"	50" x 20 55/64" x 36 1/32"
60"	62 63/64" x 24 11/16" x 36 1/32"

Colors / Finishes

Glossy White - 01

Sliver Grey - 16

Gross Weight


20"	66 LBS
24"	81 LBS
30"	91 LBS
36"	121 LBS
48"	143 LBS
60"	178 LBS

Sink Top Options

	Vanities	Ceramic basin	Artificial stone basin
20"	V8014-20	C04 2020	NONE
24"	V8014-24	C04 2418	A10 2418 25
30"	V8014-30	C04 3018	A10 3018 25
36"	V8014-36	C04 3618	A10 3618 25
48"	V8014-48	C04 4818 S/C04 4818 D	A10 4818 25 S / A10 4818 25 D
60"	V8014-60	NONE	A10 6022 25


60"

60-1/16" X 21-3/4" X 33-1/16"

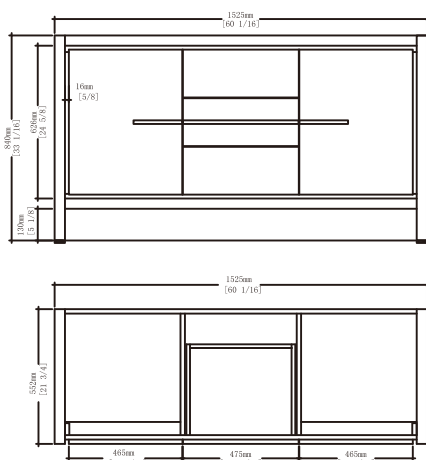


48"

47-1/16" X 17-15/16" X 33-1/16"

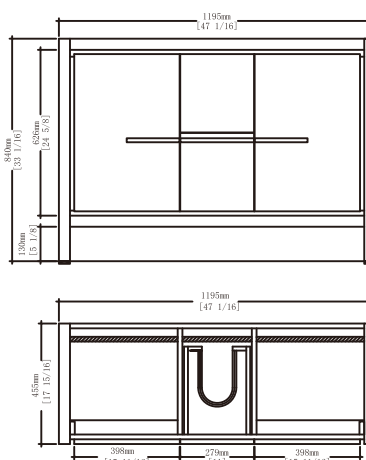


36"

35-1/4" X 17-15/16" X 33-1/16"

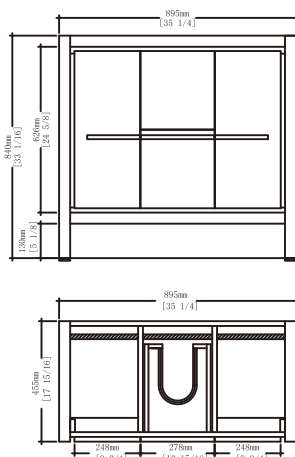


30"

29-5/16" X 17-15/16" X 33-1/16"

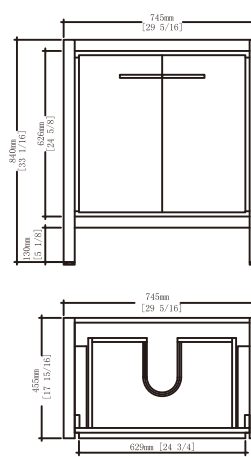


24"

23-7/16" X 17-15/16" X 33-1/16"

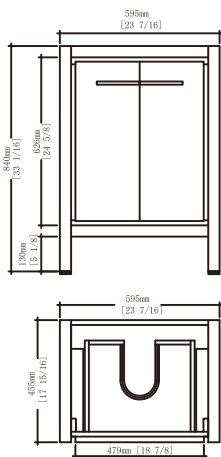


20"

19-7/16" X 19-5/16" X 29-1/2"

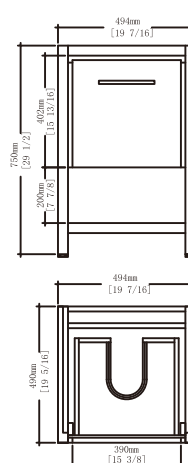


60"

60-1/16" X 21-3/4" X 33-1/16"

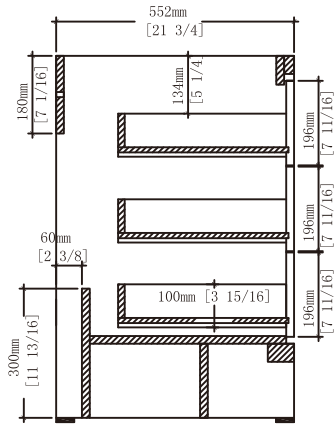


48"

47-1/16" X 17-15/16" X 33-1/16 "

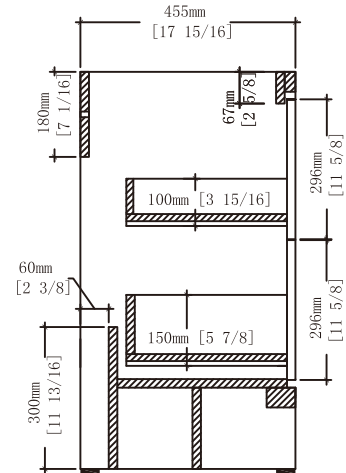


36"

35-1/4 X 17-15/16" X 33-1/16 "

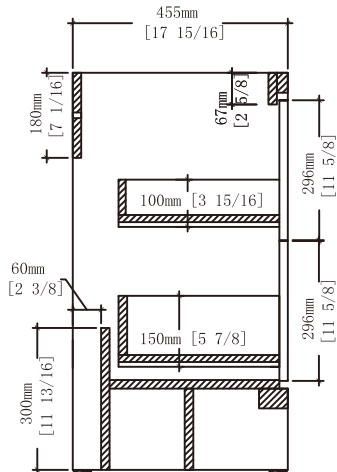


30"

29-5/16" X 17-15/16" X 33-1/16 "

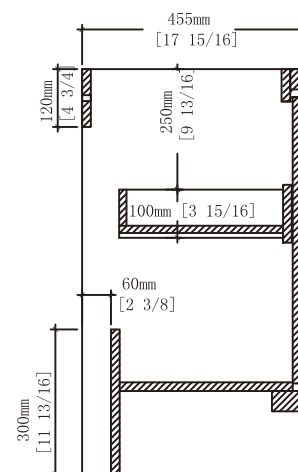


24"


23-7/16" X 17-15/16" X 33-1/16 "

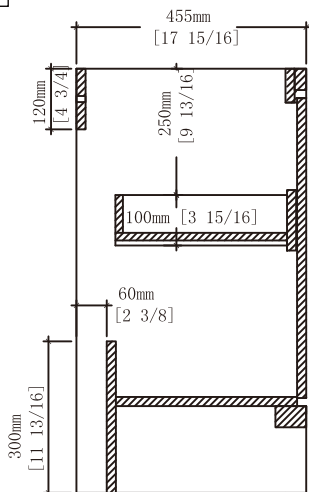

20"


19-7/16" X 19-5/16" X 29-1/2 "

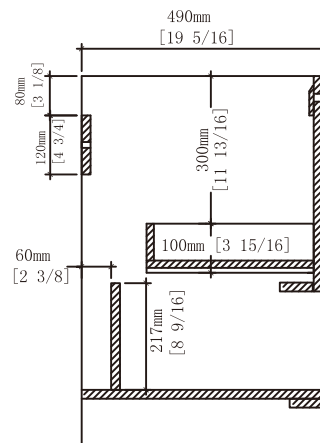

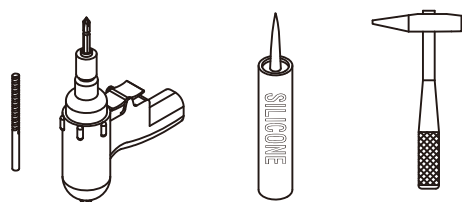Hardware				Tools (not includes)	
No.		Draw	Qty		
A	White rubber plug (Ø6mm)		2pcs		
B	Screws (Ø4 x 68mm)		2pcs		
C	Stainless steel cover		2pcs		


STEP 1

Mark the pre-drilled holes with a pencil or marker after positioning the vanity.

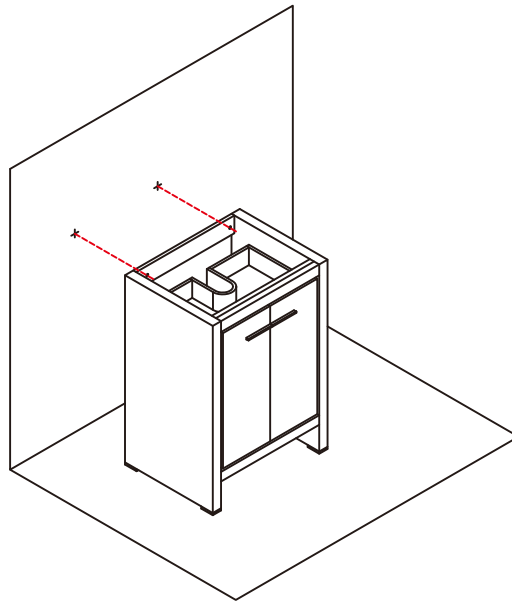


STEP 2

Drill the holes with suitable drill-bits base on different condition of the wall.

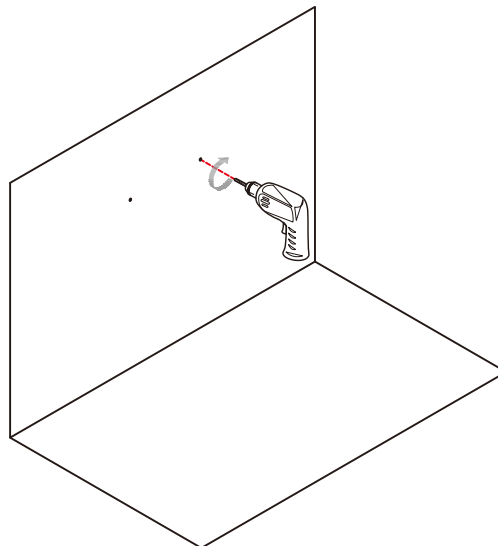


STEP 3

Hammer in the expansion plug.

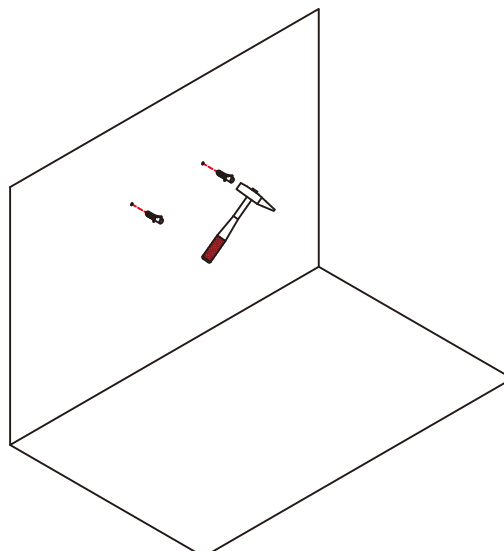


STEP 4

Secure the vanity onto the wall with screws.

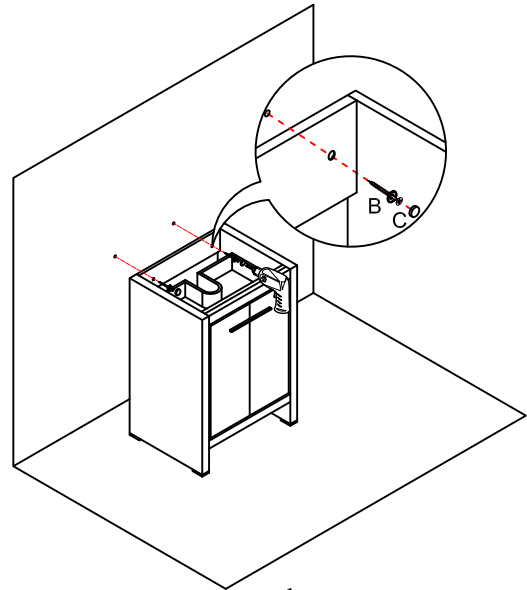


STEP 5

Install the basin with silicone.

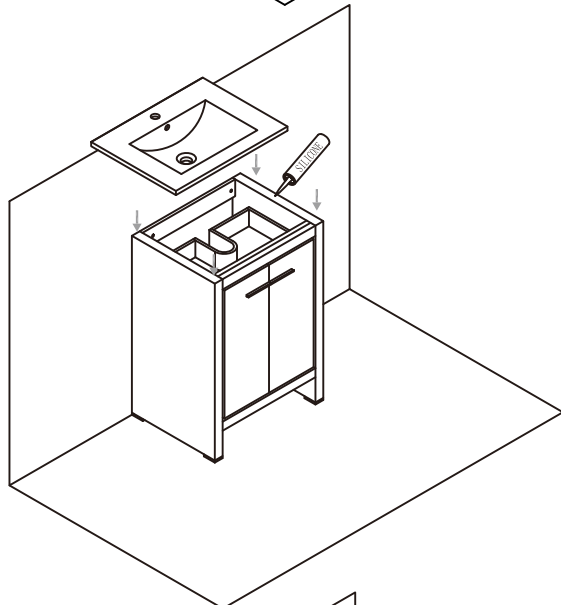

STEP 6

Installation complete.

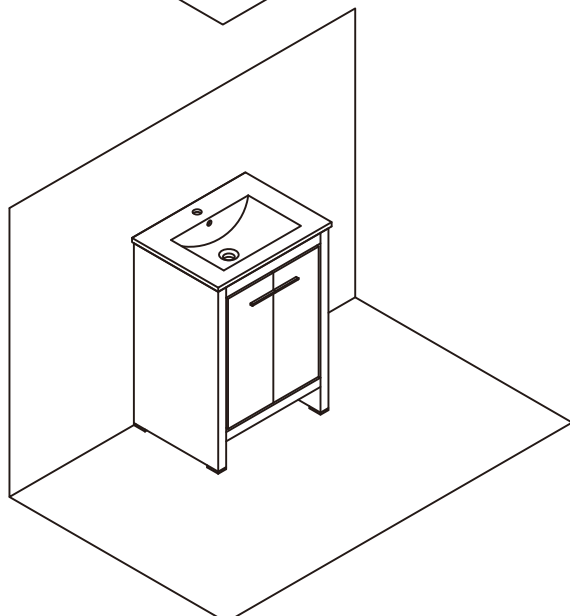





Blossom
(718)-366-0088 | sales@BlossomUS.com | www.BlossomUS.com

For clarification, please contact us at (718)-366-0088 or sales@BlossomUS.com
All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.


BLOSSOM®
luxury made simple

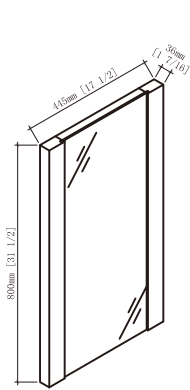


M6014-20

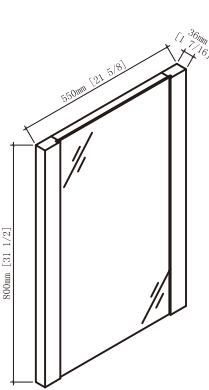


M6014-24

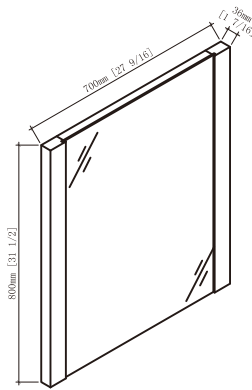

M6014-30

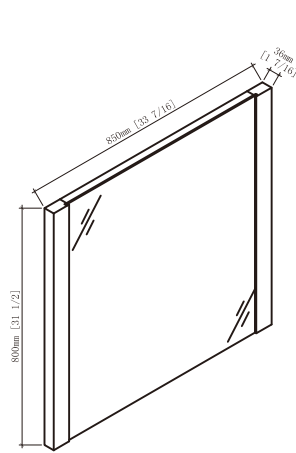

M6014-36

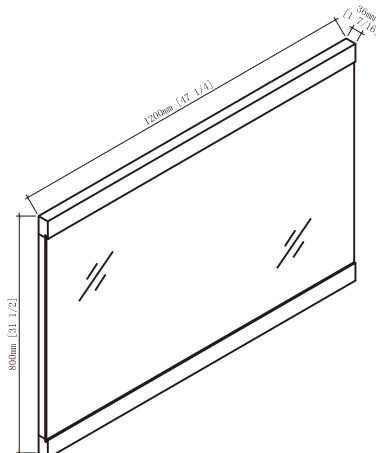

M6014-48

[MILAN]
Series Mirror
Specifcation & Installation Guide

Features

- Modern design with high glossy paint or silver grey melamine finishes.
- Easy installation.

Package Dimension

20"	20-1/2" x 4-9/64" x 34-29/64"
24"	24-39/64" x 4-9/64" x 34-29/64"
30"	30-33/64" x 4-9/64" x 34-29/64"
36"	36-7/16" x 4-9/64" x 34-29/64"
48"	50-13/64" x 4-9/64" x 34-29/64"

Colors / Finishes


Glossy White - 01

Sliver Grey - 16


Gross Weight

20"	21 LBS
24"	21 LBS
30"	25 LBS
36"	26 LBS
48"	46 LBS


48" 47-1/4" X 1-7/16" X 31-1/2"

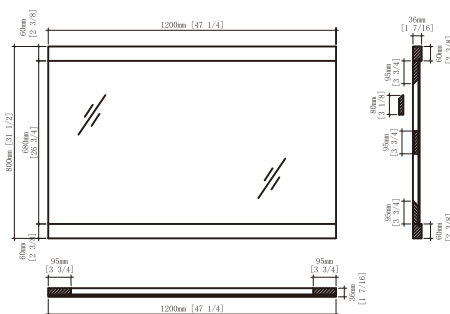


36" 33-7/16" X 1-7/16" X 31-1/2"

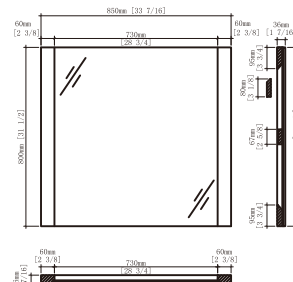


30" 27-9/16" X 1-7/16" X 31-1/2"

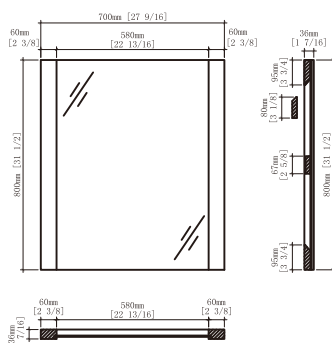


24" 21-5/8" X 1-7/16" X 31-1/2"

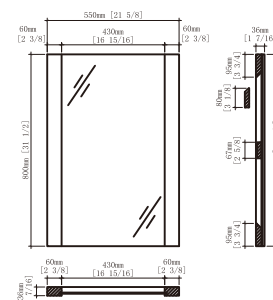


20" 17-1/2" X 1-7/16" X 31-1/2"

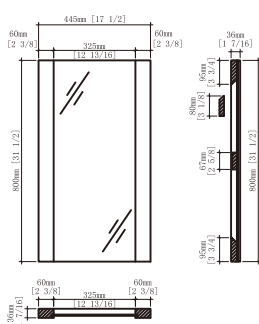

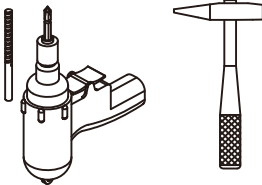Hardware				Tools (not includes)	
No.		Draw	Qty		
A	Green rubber plug		4pcs		
B	Screw		4pcs		


STEP 1

1. Measure the wall-hung board and mark down the holes on the wall.
2. Drill the holes with suitable drill-bits base on different condition of the wall.
3. Use a hammer to knock the green expansion rubber plug into the hole.

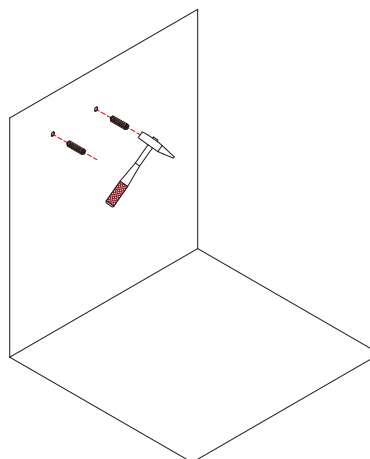


STEP 2

Screw the 45 degree wall-hung panel onto the wall.

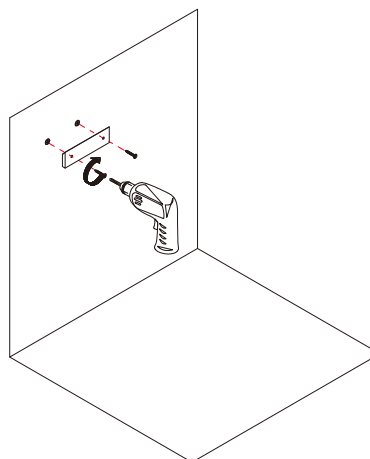

STEP 3


1. Put up the back top panel of mirror on the 45 degree wall-hung panel .
2. Installation completed.
3. Carefully slide the mirror left or right to center with the vanity.

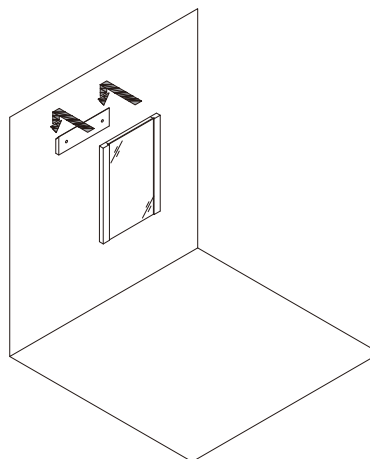




Blossom
(718)-366-0088 | sales@BlossomUS.com | www.BlossomUS.com


For clarification, please contact us at (718)-366-0088 or sales@BlossomUS.com
All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.

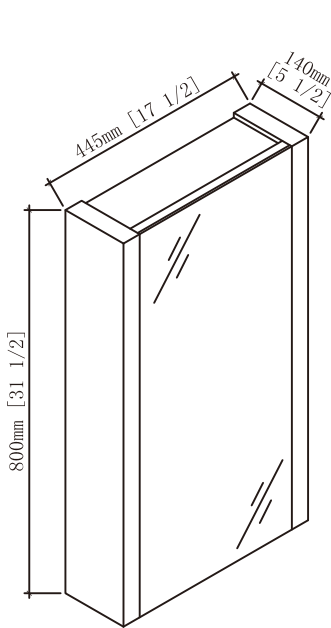

MC7014-20

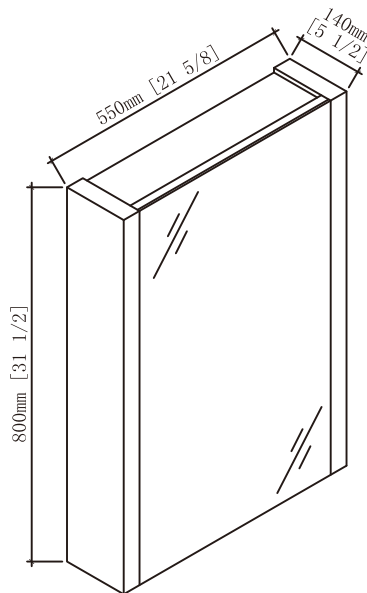

MC7014-24

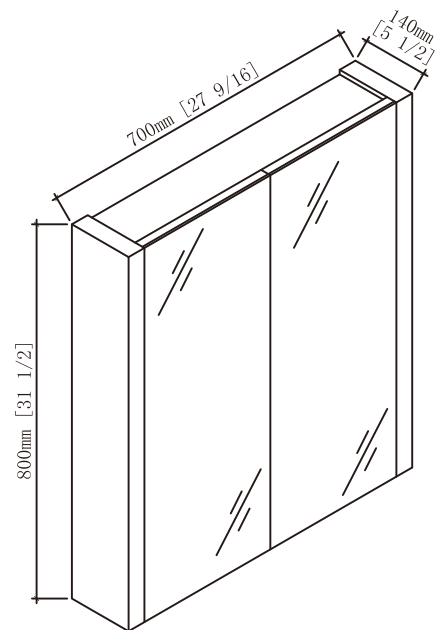

MC7014-30

[MILAN]
Series Medicine Cabinets
Specification & Installation Guide

Features

- Modern design with high glossy paint or silver grey melamine finishes.
- Soft-closing doors.
- Easy installation.
- Adjustable shelves.

Package Dimension

20" 20 1/2" x 8 15/32" x 34 29/64"

24" 24 39/64" x 8 15/32" x 34 29/64"

30" 30 33/64" x 8 15/32" x 34 29/64"

Colors / Finishes

Glossy White - 01

Sliver Grey - 16

Gross Weight


20" 45 LBS

24" 49 LBS

30" 57 LBS


30"

27-9/16 X 5-1/2" X 31-1/2 "

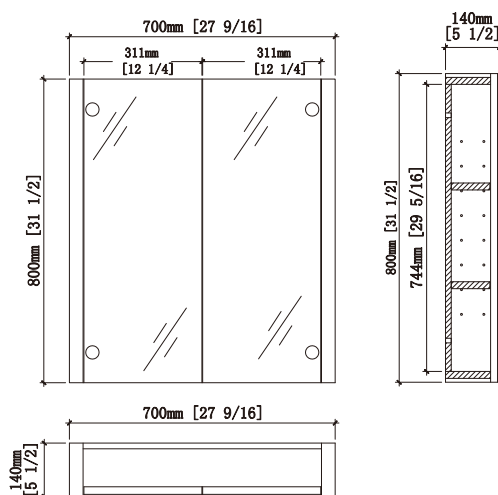


24"


21-5/8" X 5-1/2" X 31-1/2 "

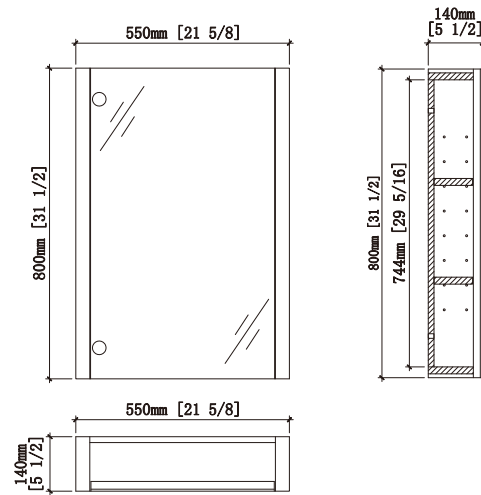

20"


17-1/2 X 5-1/2" X 31-1/2 "

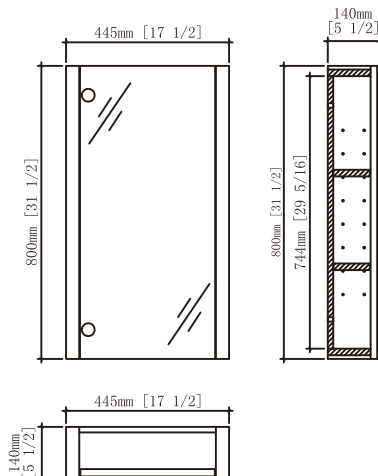

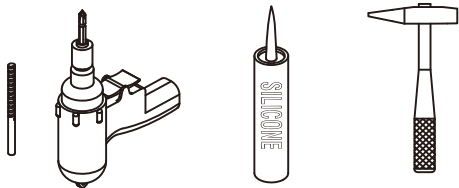Hardware				Tools (not includes)	
No.		Draw	Qty		
A	White rubber plug (Ø6mm)		4pcs		
B	Screws (Ø4 x 68mm)		4pcs		
C	Stainless steel cover		4pcs		


STEP 1

1. Drill the holes with suitable drill-bits base on different condition of the wall.
2. Use a hammer to knock the white expansion rubber plug into the hole.

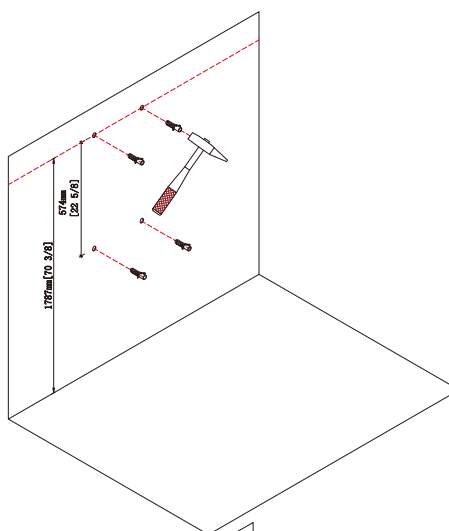


STEP 2

- Align the holes in the wall and lock the mirror cabinet to the wall with screws.

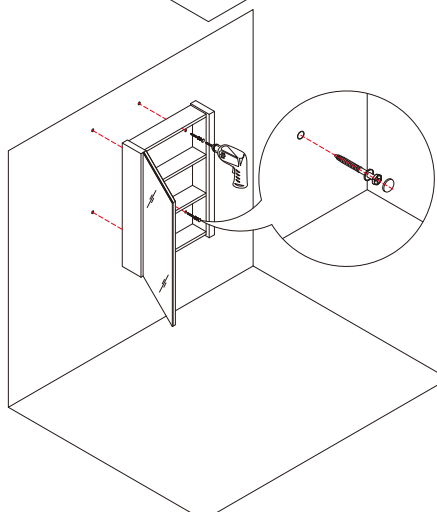

STEP 3

Finish

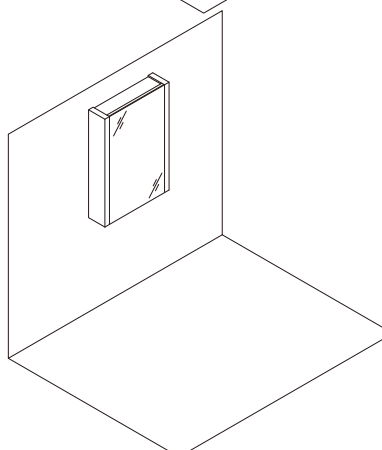



Blossom
(718)-366-0088 | sales@BlossomUS.com | www.BlossomUS.com

For clarification, please contact us at (718)-366-0088 or sales@BlossomUS.com
All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.