



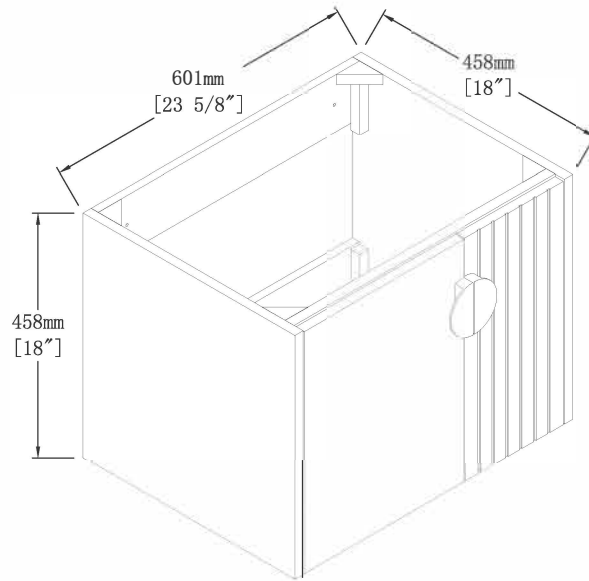

V8034-24

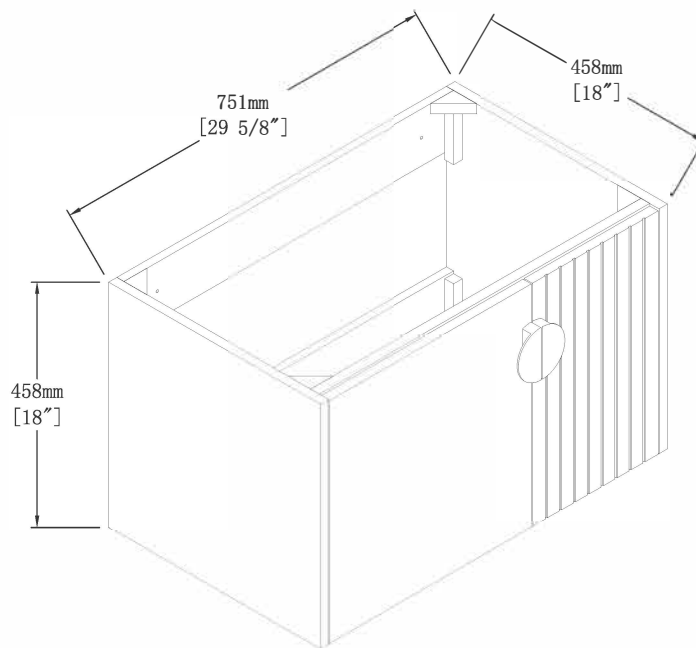

V8034-30

[**MOSS**]
Series Vanities

Specification & Installation Guide

Features

- Modern design with multi finishes.
- Soft-closing doors.
- Compatible LED mirror or medicine cabinet.
- Come with 2-1/2" thick edge Modern artificial stone basin.
- Door knobs come with 4 Different finishes(Chrome, Brushed Nickel, Matte Black and Brushed Gold).
- Easy installation.

Package Dimension

24" 28 1/8"x 22 1/4"x 26 3/8"

30" 33 7/8"x 22 1/4"x 26 3/8"

Colors / Finishes

MATT WHITE - 01
PASHM GREY - 15
SAGE GREEN - 10
NAVY BLUE - 25

Gross Weight

24" 80 LBS

30" 94 LBS

Sink Top Options

Vanities


24"	V8034-24
30"	V8034-30

Artificial stone basin

A10	2418	25
A10	3018	25

24"


23-5/8"x18"x18"

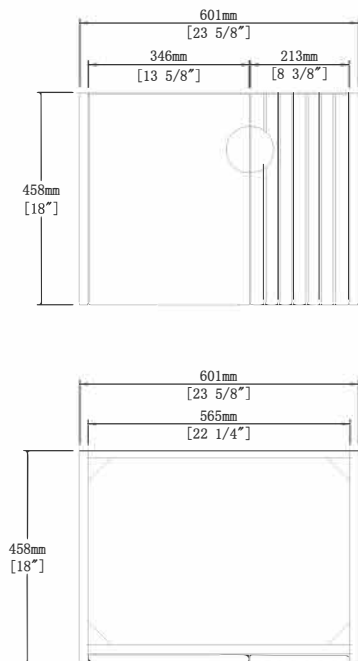

TOP VIEW


30"

29-5/8"x18"x18"

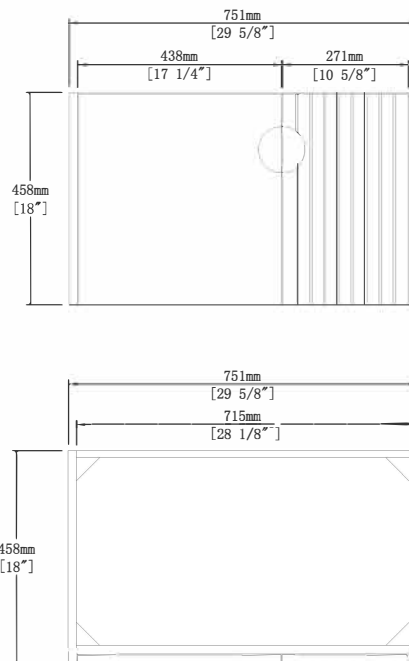


TOP VIEW

24"

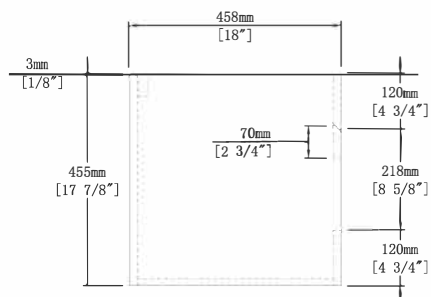


SIDE VIEW

30"

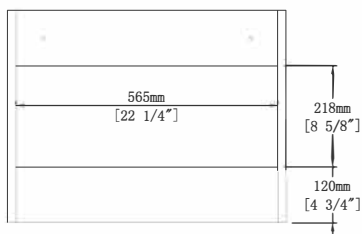


BACK VIEW

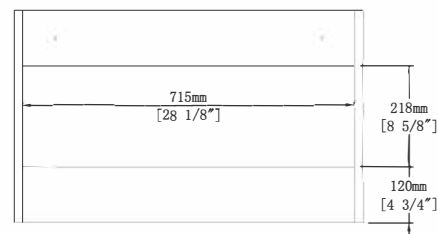

BACK VIEW


Parts List

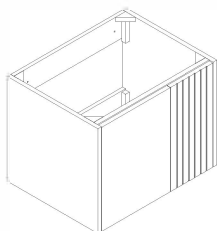

#1 x1



#2 x1

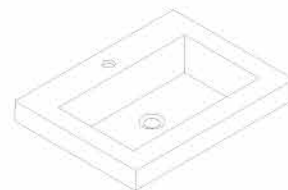


#3 x1

Hardware (Included)

NO.		Draw	QTY
A	Screw (M4*55mm)		5
B	White rubber plug (M8*40mm)		5
C	Screws (Ø5/32*25mm)		4
D	Handle		2


Tools

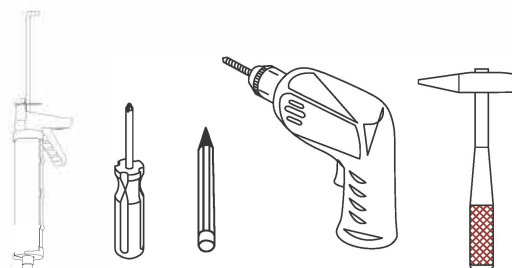

Wall blocking is required for all installation

The suggested heights without the sink are 30-5/8" for Blossom's artificial stone basins.

Depending on the sinks selected, the total height will vary from 33-1/2"(850mm) to 35-1/4"(895mm). If an alternate height desired, adjust the rough-in and backing material heights using the dimensions provided.

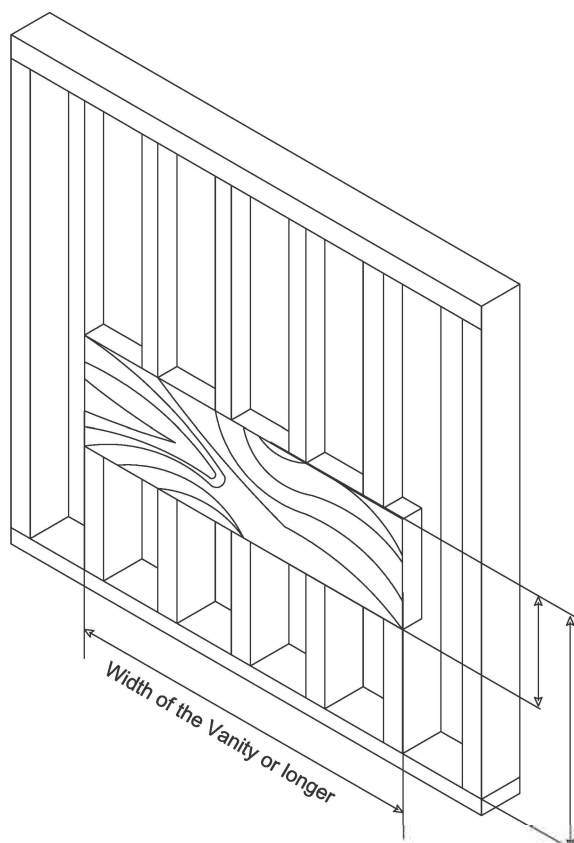


Recommended using minimum 3/4"
thick plywood

Wood Reinforcement Board
minimum size 8"

The suggestion install height
33-1/2"(850mm) to
35-1/4"(895mm)


STEP 1

- Mark 4 pre-drilled holes on part #2 with a pencil on the wall after measure, positioning and leveling the vanity.
- Drill the holes with suitable drill-bits base on different conditions of the wall.

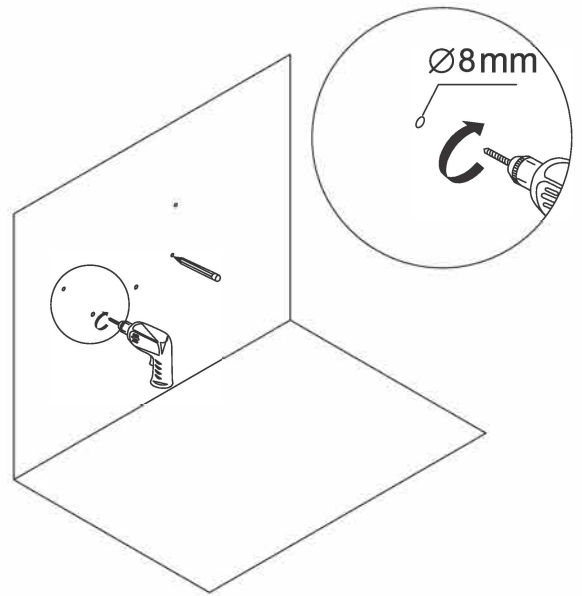


STEP 2

- White rubber plug B for brick wall or concrete wall.

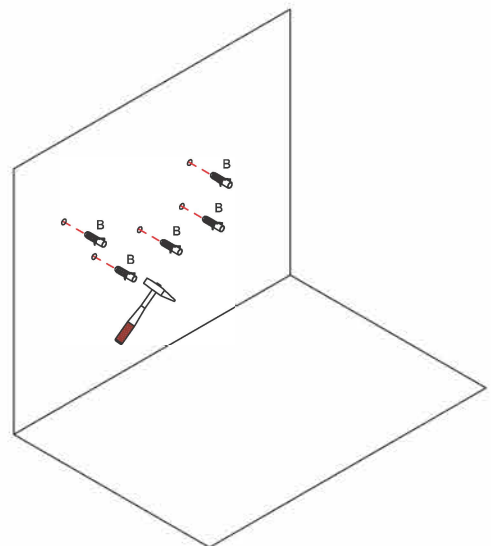


STEP 3

- Fix part #2 (hanger) onto the wall using screw A.

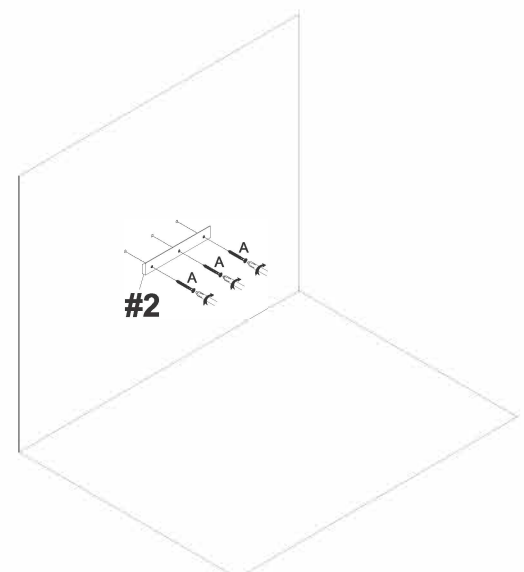


STEP 4

- Hang Part #1 onto Part #2 which has been installed on the wall.

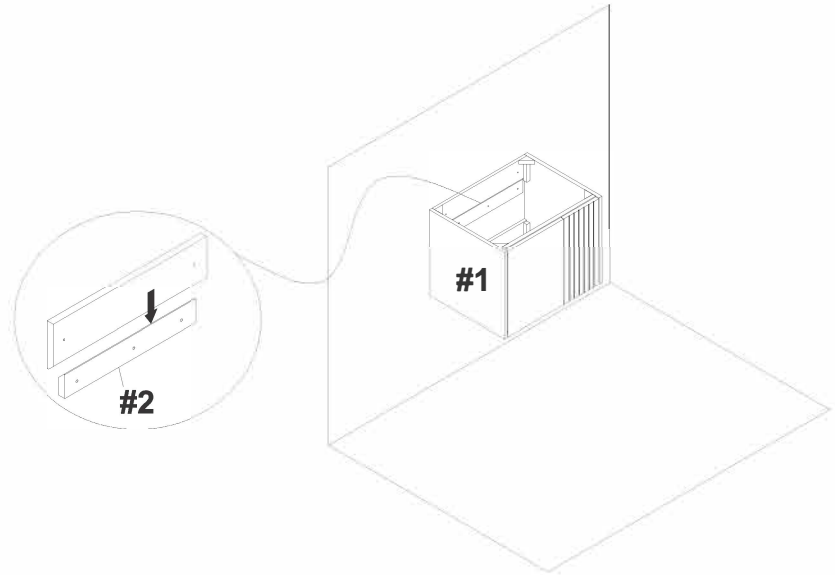


STEP 5

- Fix Part #1 to the wall by screws A.

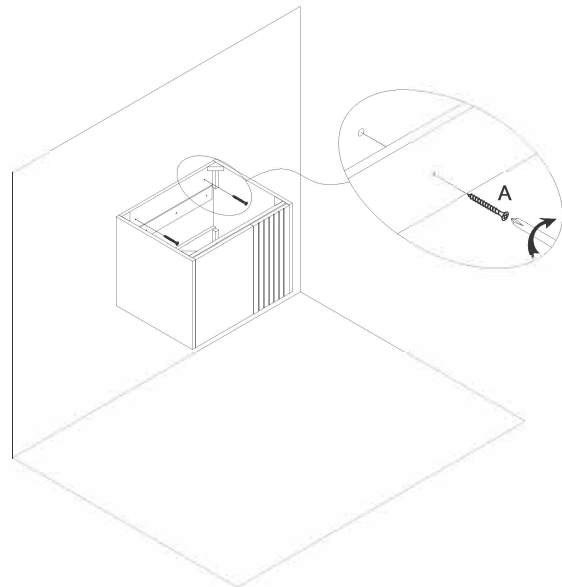


STEP 6

- Open the doors and install handles D with screws C.

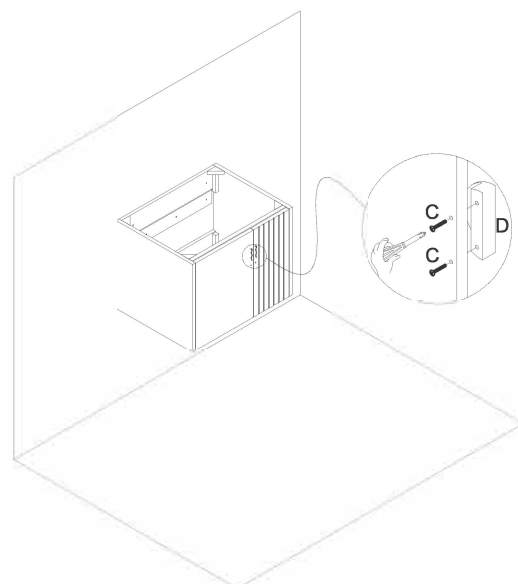


STEP 7

- Install the basin with silicone.

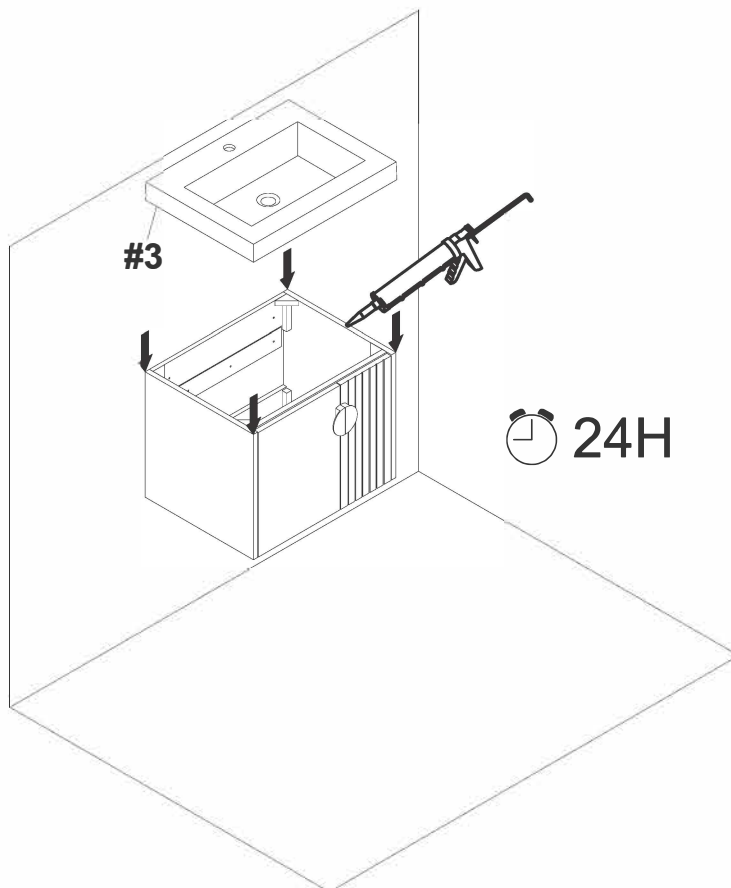

STEP 8

- Installation complete.

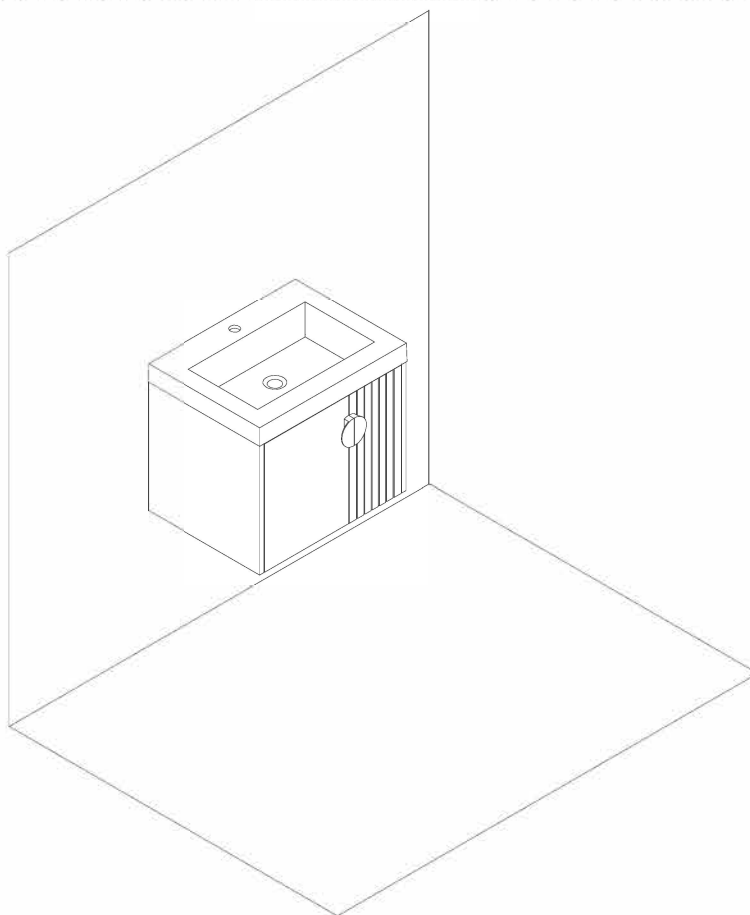



Blossom
(718)-366-0088 | sales@BlossomUS.com | www.BlossomUS.com

For clarification, please contact us at (718)-366-0088 or sales@BlossomUS.com
All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.