



BLOSSOM®


luxury made simple

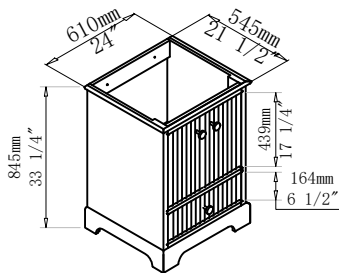


V8051 24

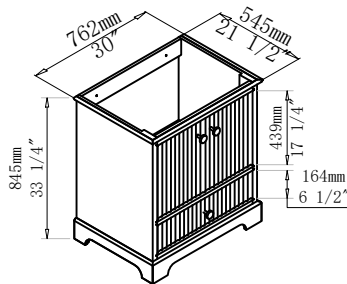


V8051 30

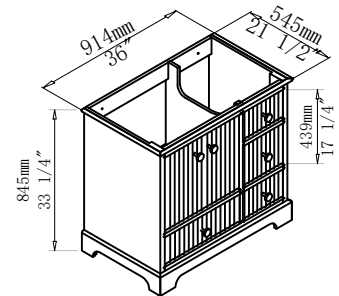


V8051 36

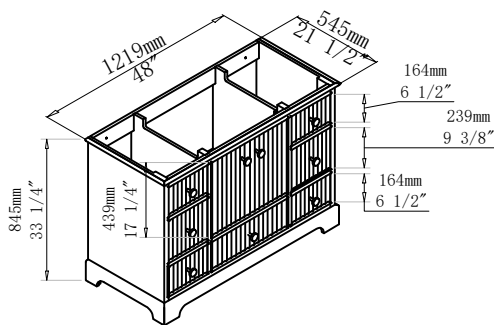


V8051 48

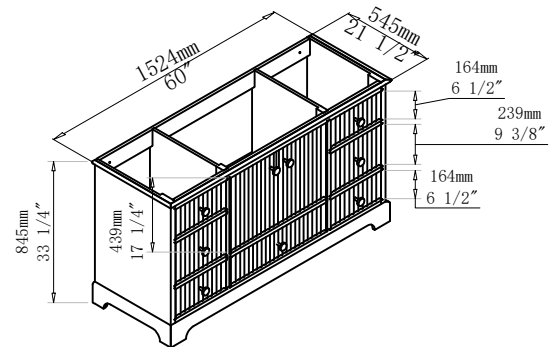

V8051 60S

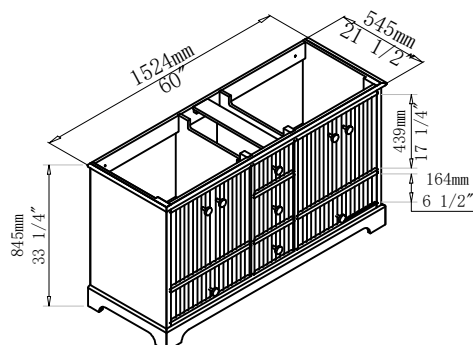

V8051 60D

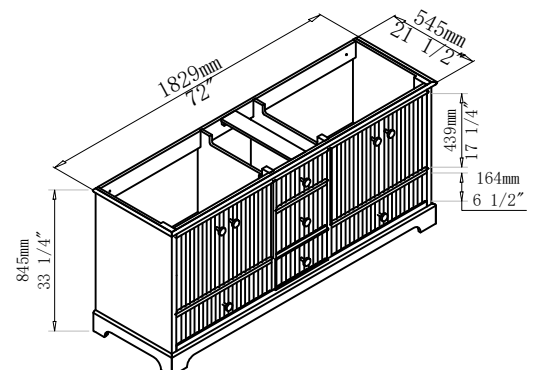


V8051 72


SICILY
Series Vanities

Specification & Installation Guide


V8051 24

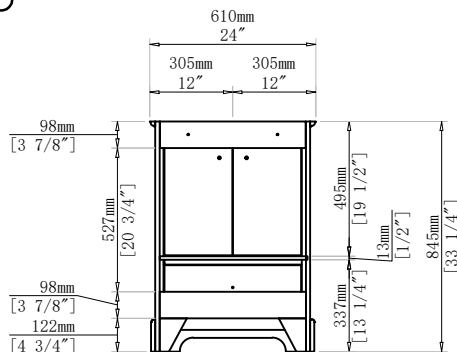


V8051 30

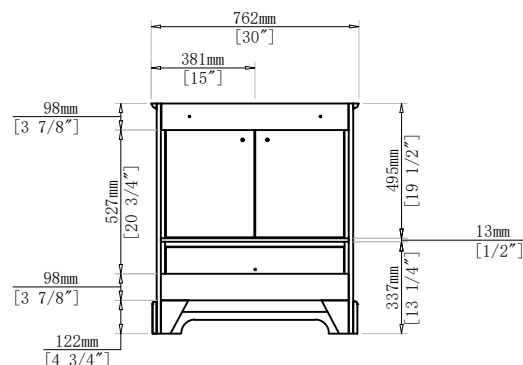


V8051 36

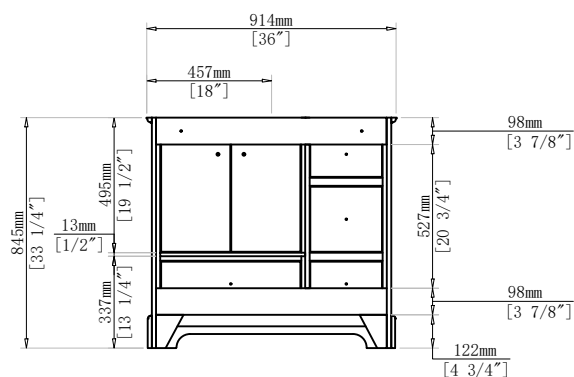


V8051 48

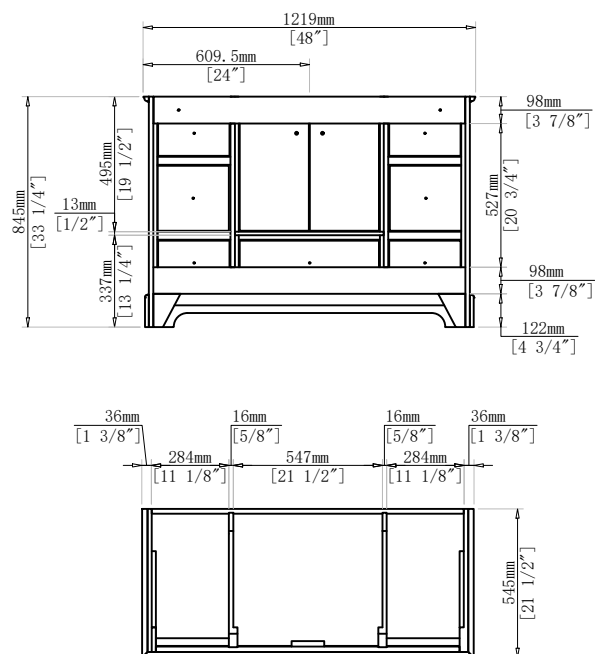


V8051 60S

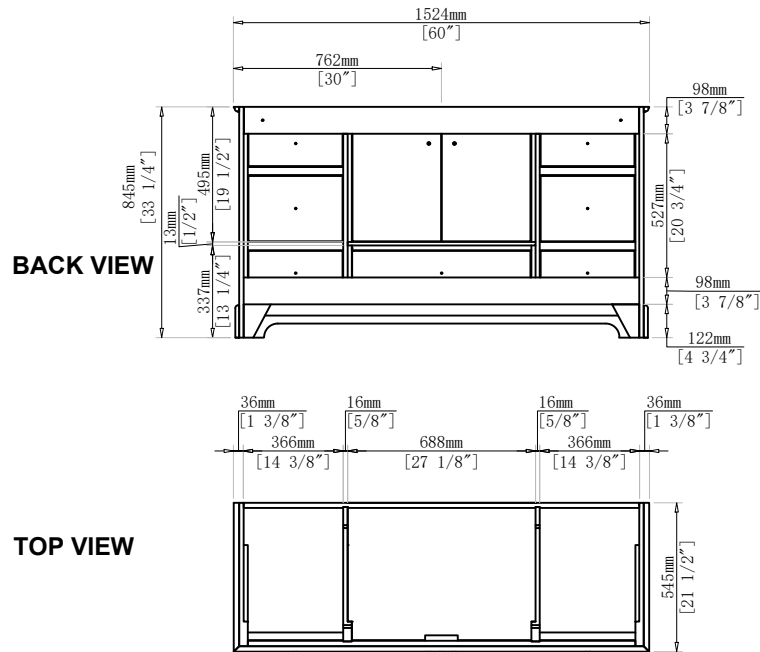


V8051 60D

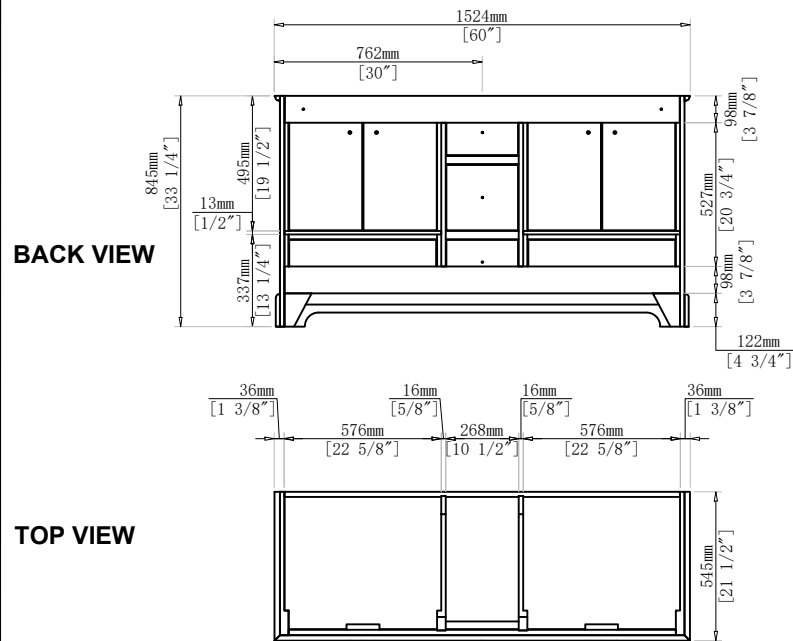

V8051 72D

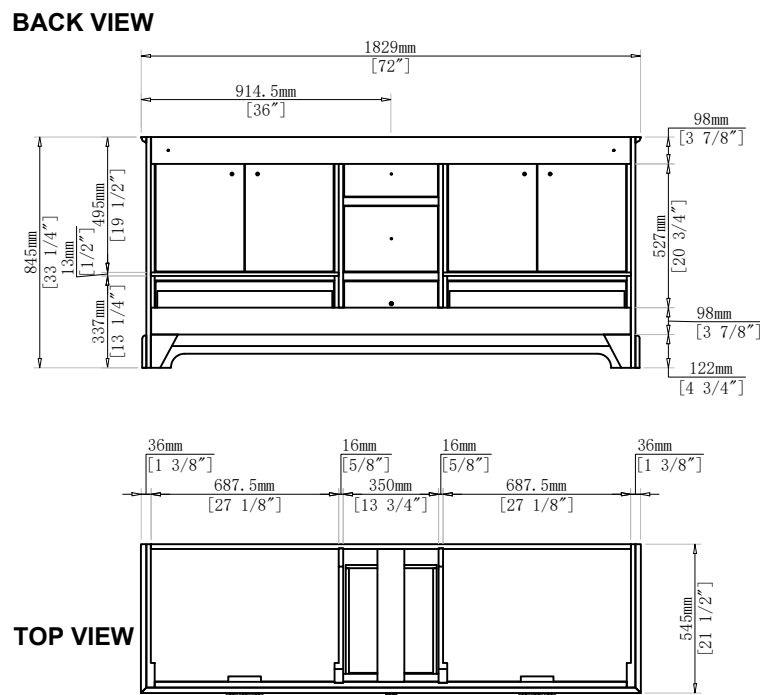

SIDE VIEW

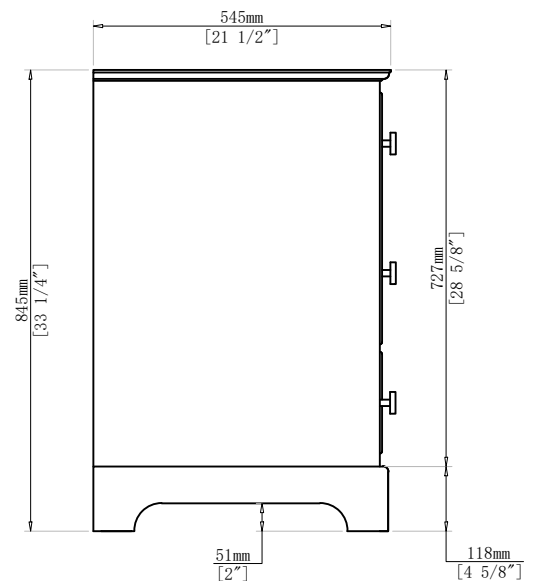

Features


- Solid wood construction and ply-wood case
- Soft-closing doors and full-extension soft closing
Drawers with dovetail construction.
- Adjustable screws for legs (1/2")
- The cabinet wall fixing screw package

Vanities Dimension


V8051	24	24"x21-1/2"x33-1/4"
V8051	30	30"x21-1/2"x33-1/4"
V8051	36	36"x21-1/2"x33-1/4"
V8051	48	48"x21-1/2"x33-1/4"
V8051	60 S	60"x21-1/2"x33-1/4"
V8051	60 D	60"x21-1/2"x33-1/4"
V8051	72	72"x21-1/2"x33-1/4"

Item Number	Finishing	Pack Dimension	Gross Weight
V8051 24 36	Light Oak	27-1/8"x24-3/4"x38"	68 LBS
V8051 24 37	Black Oak	27-1/8"x24-3/4"x38"	68 LBS
V8051 30 36	Light Oak	33-1/8"x24-3/4"x38"	75 LBS
V8051 30 37	Black Oak	33-1/8"x24-3/4"x38"	75 LBS
V8051 36 36	Light Oak	39-1/8"x24-3/4"x38"	115 LBS
V8051 36 37	Black Oak	39-1/8"x24-3/4"x38"	115 LBS
V8051 48 36	Light Oak	51-1/8"x24-3/4"x38"	167 LBS
V8051 48 37	Black Oak	51-1/8"x24-3/4"x38"	167 LBS
V8051 60 36 S	Light Oak	63"x24-3/4"x38"	172 LBS
V8051 60 37 S	Black Oak	63"x24-3/4"x38"	172 LBS
V8051 60 36 D	Light Oak	63"x24-3/4"x38"	172 LBS
V8051 60 37 D	Black Oak	63"x24-3/4"x38"	172 LBS
V8051 72 36	Light Oak	75-1/4"x24-3/4"x38"	185 LBS
V8051 72 37	Black Oak	75-1/4"x24-3/4"x38"	185 LBS


Item Number	Match Top Code	Top Dimension	Top Material
V8051 24 36/37	CT5 2422 05C	25"x22"	White Engineered Stone
V8051 30 36/37	CT5 3022 05C	31"x22"	White Engineered Stone
V8051 36 36/37	CT5 3622 05C	37"x22"	White Engineered Stone
V8051 48 36/37	CT5 4822 05C	49"x22"	White Engineered Stone
V8051 60 36/37 S	CT5 6022 05SC	61"x22"	White Engineered Stone
V8051 60 36/37 D	CT5 6022 05DC	61"x22"	White Engineered Stone
V8051 72 36/37	CT5 7222 05C	73"x22"	White Engineered Stone

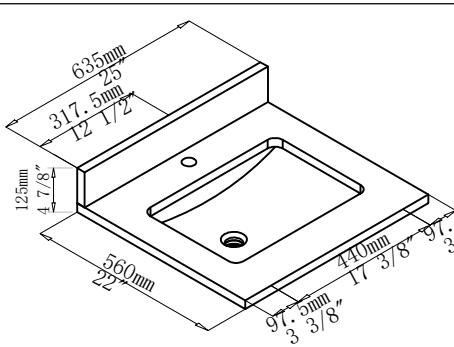


CT5 2422 05C

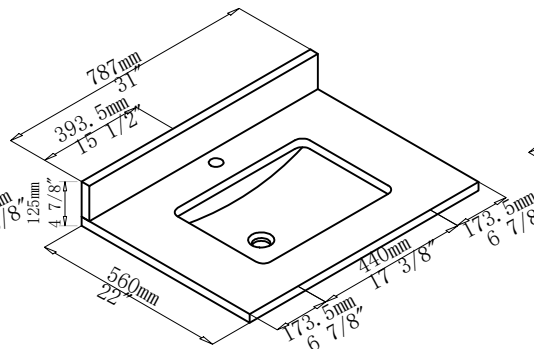


CT5 3022 05C

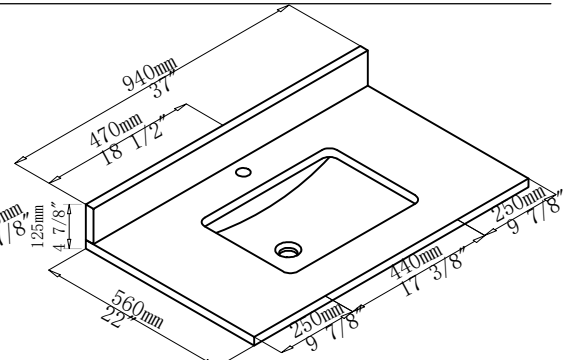


CT5 3622 05C

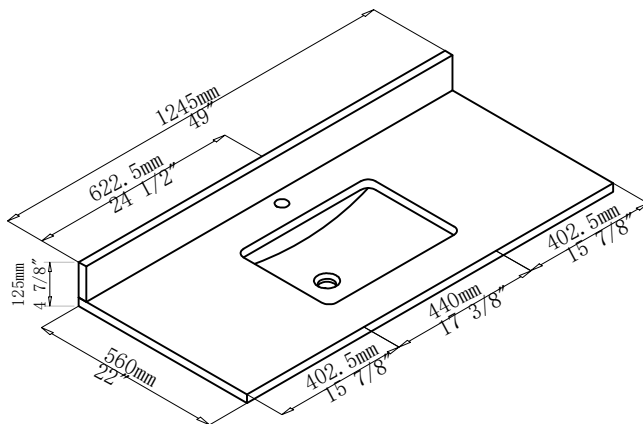


CT5 4822 05C

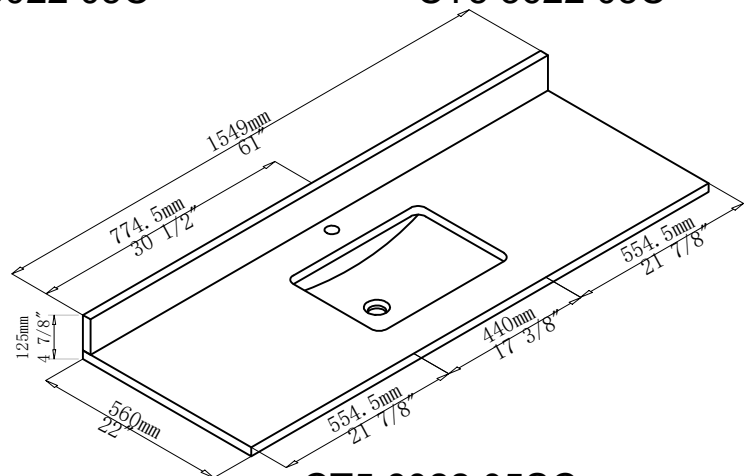


CT5 6022 05SC

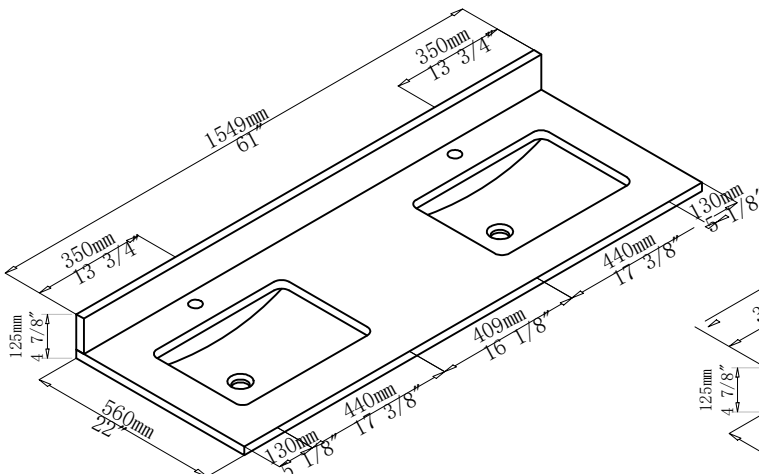


CT5 6022 05DC

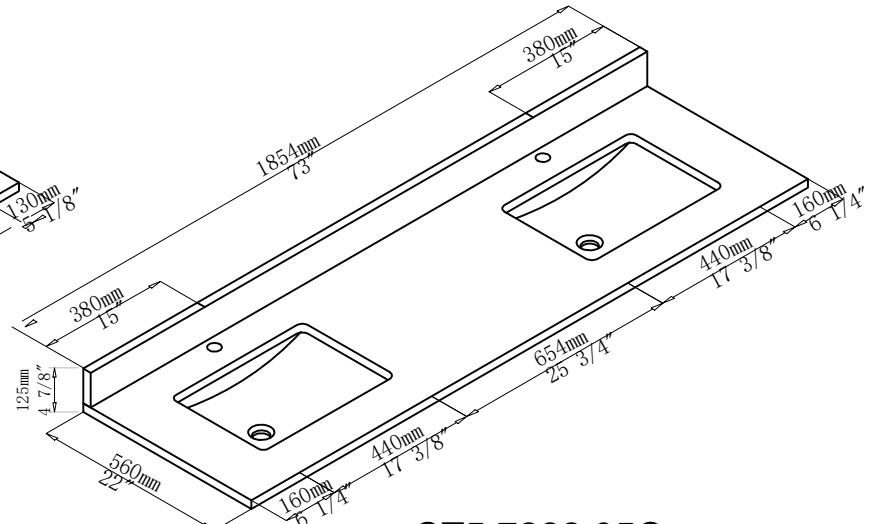


CT5 7222 05C

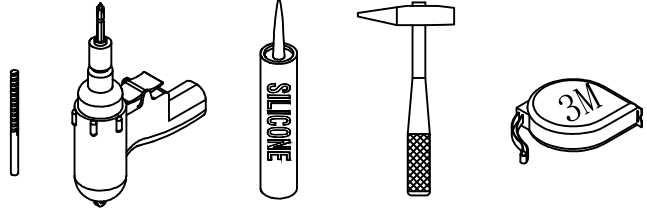Hardware				
No.		Draw	Qty	
A	White rubber plug (Ø6mm)		2pcs	
B	Screws (Ø 4 x 63mm)		2pcs	
C	Stainless steel cover		2pcs	


1 Mark the pre-drilled holes with a pencil or marker after positioning the vanity.

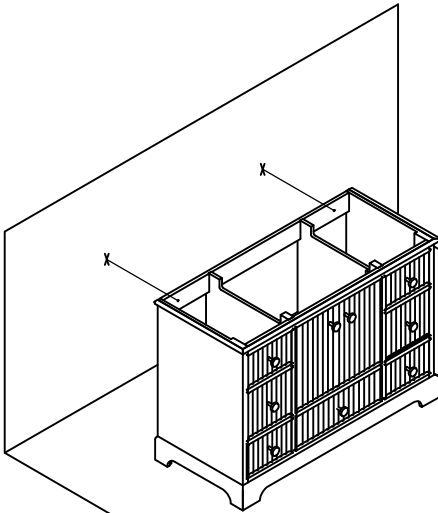


2 Drill the holes with suitable drill-bits base on different condition of the wall.

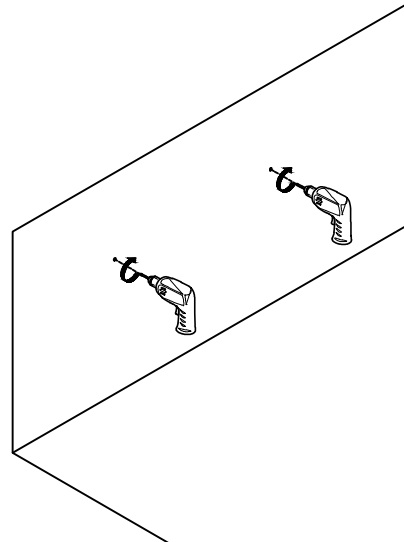


3 Hammer in the expansion plug.

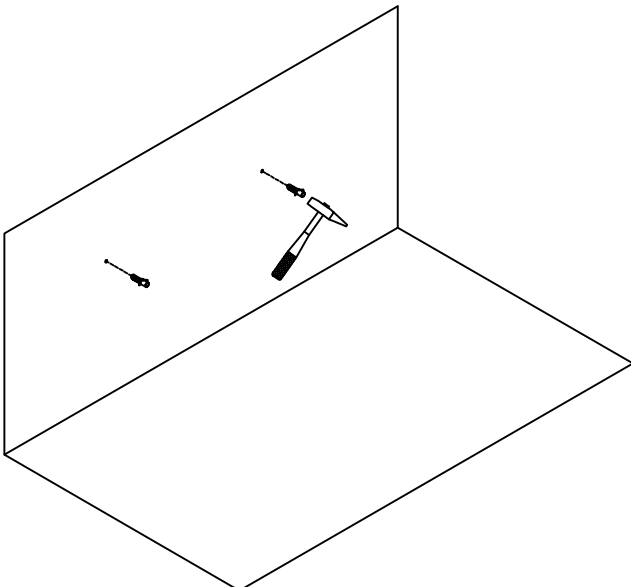


4 Secure the vanity onto the wall with screws.

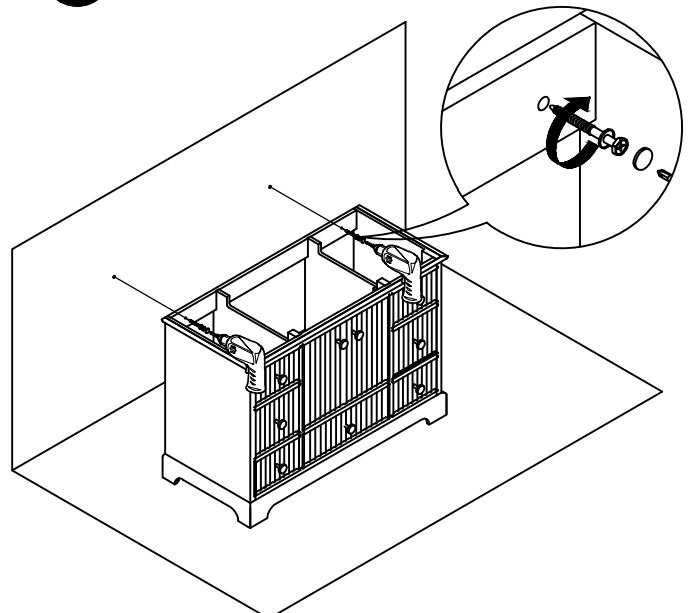


5 Install the basin with silicone.

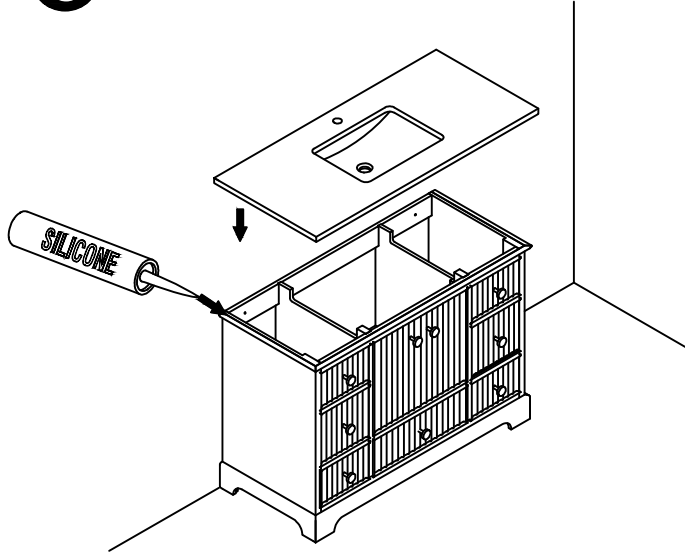

6 Install the backsplash with silicone.

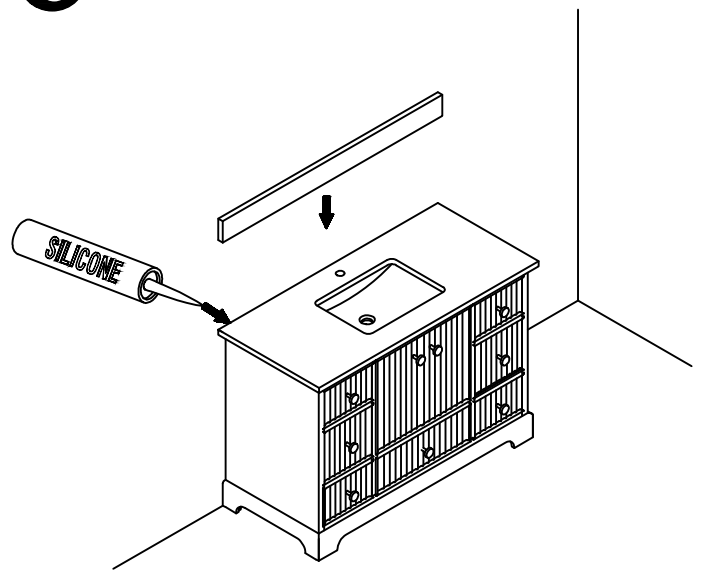

7 Installation complete.

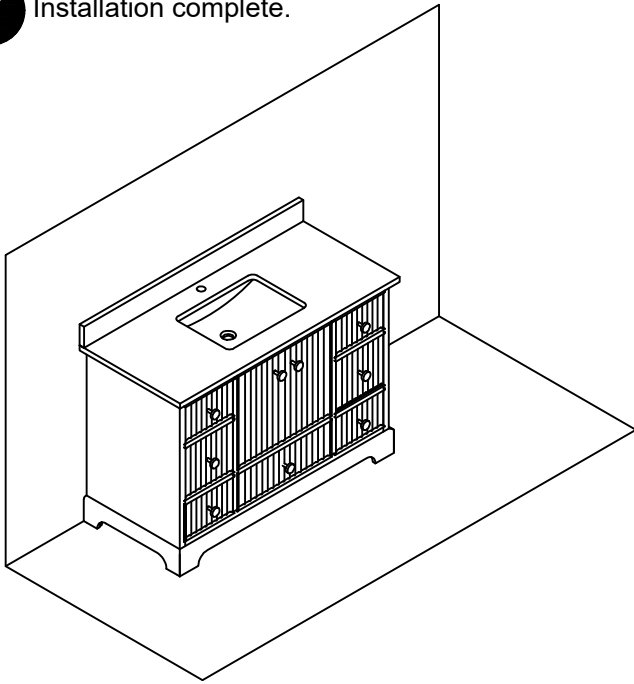

Suggestion:
Fix the faucet onto the top between 4 and 5