

BLOSSOM®


luxury made simple

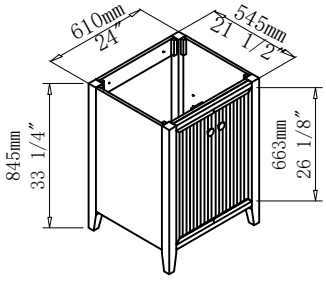


V8050 24

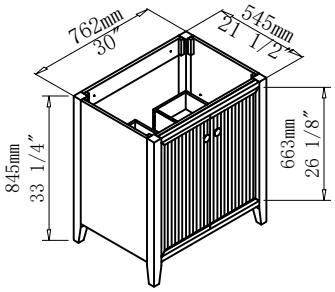


V8050 30

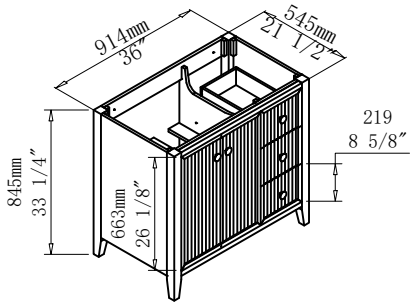


V8050 36

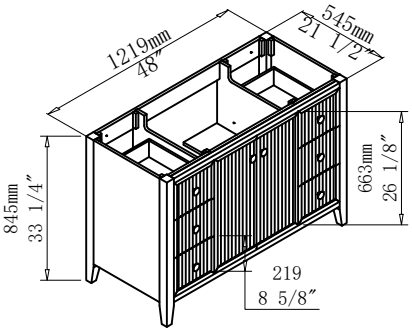


V8050 48

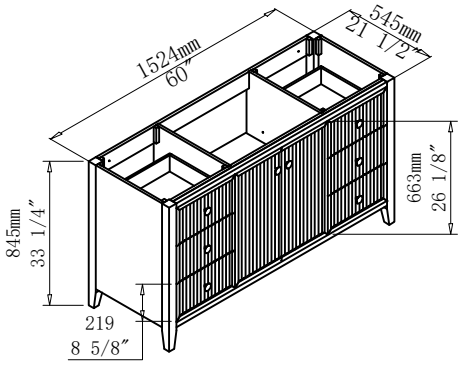

V8050 60S

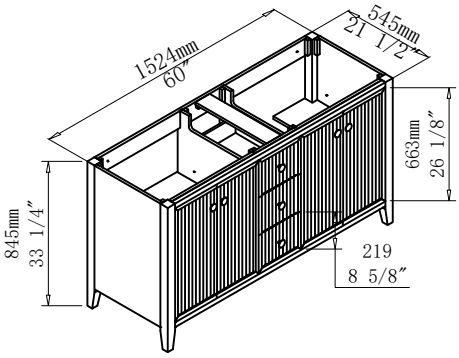

V8050 60D

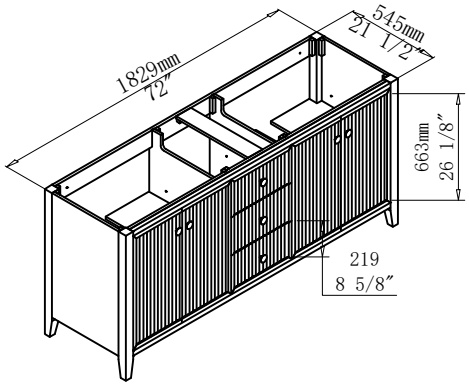

V8050 72

TORINO

Series Vanities

SPecification & Installation Guide


www.blossomus.com

BLOSSOM®
luxury made simple


TORINO Vanities Specification

V8050 24

BACK VIEW

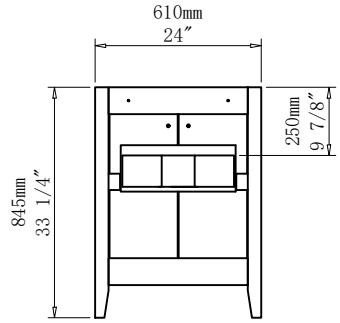


TOP VIEW

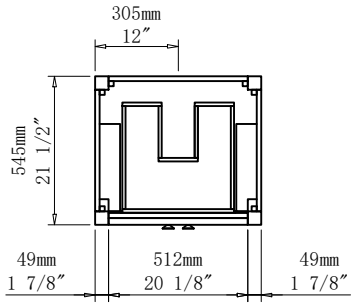


V8050 30

BACK VIEW

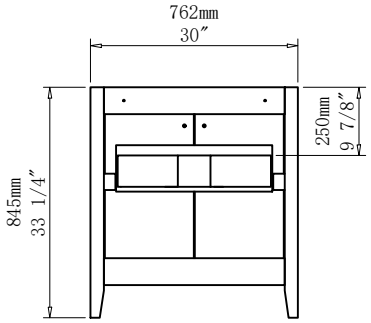


TOP VIEW

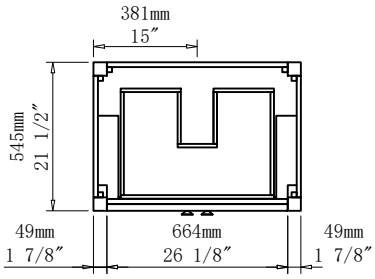


V8050 36

BACK VIEW

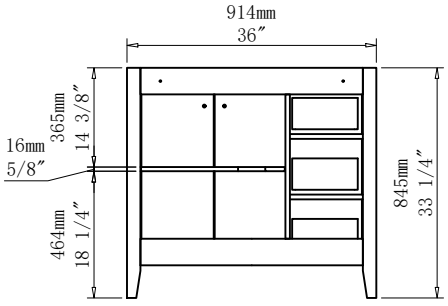


TOP VIEW

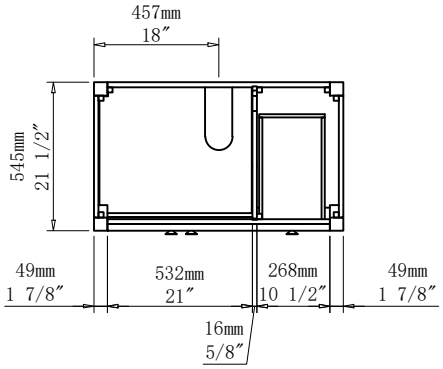


V8050 48

BACK VIEW

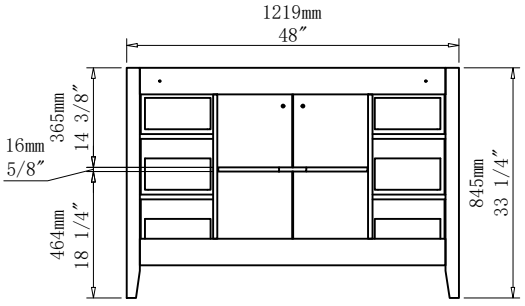

TOP VIEW

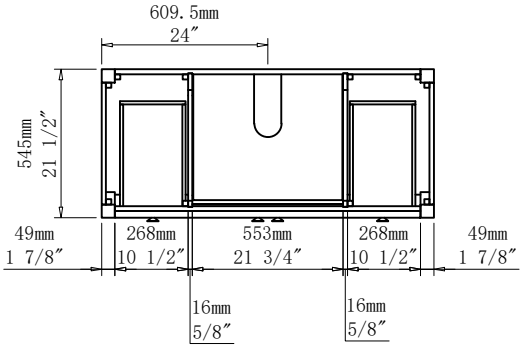


BLOSSOM®
luxury made simple


TORINO Vanities Specification

V8050 60S

BACK VIEW

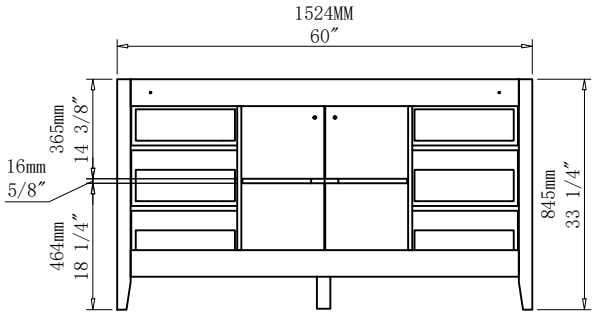


TOP VIEW

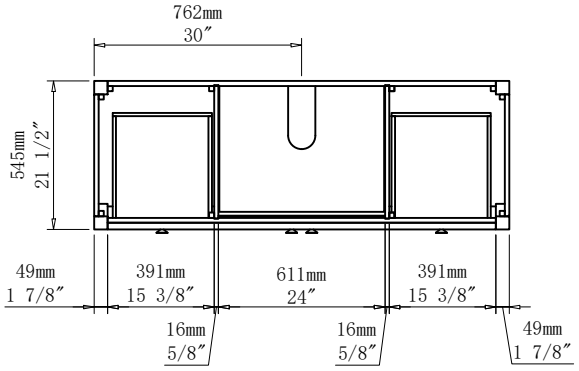


V8050 60D

BACK VIEW

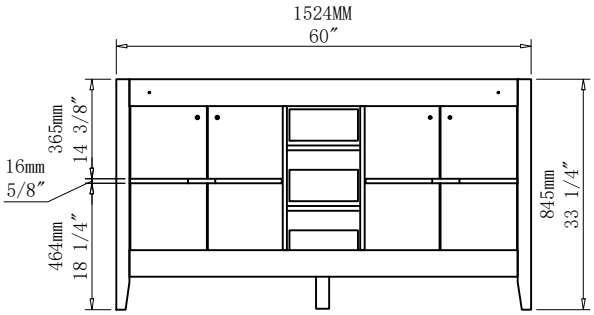


TOP VIEW

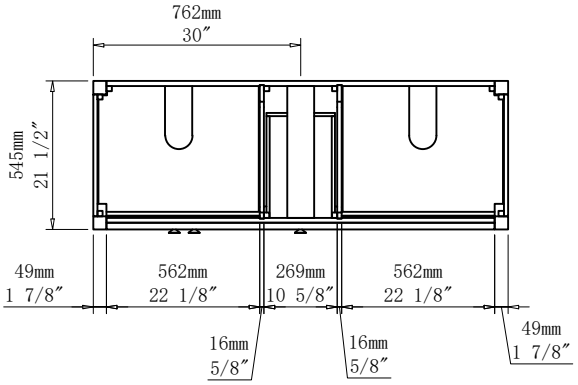


V8050 72D


BACK VIEW

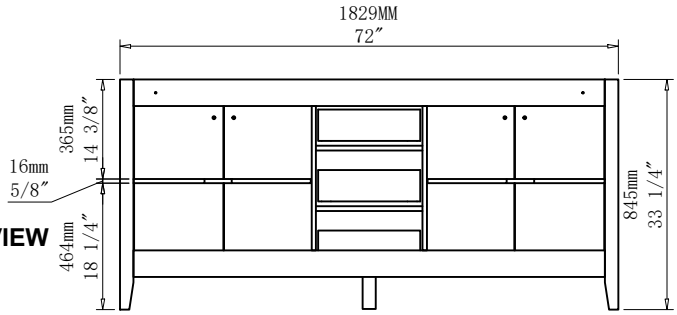

TOP VIEW

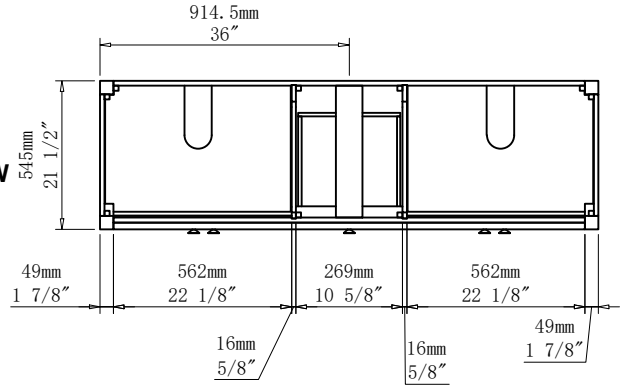

SIDE VIEW

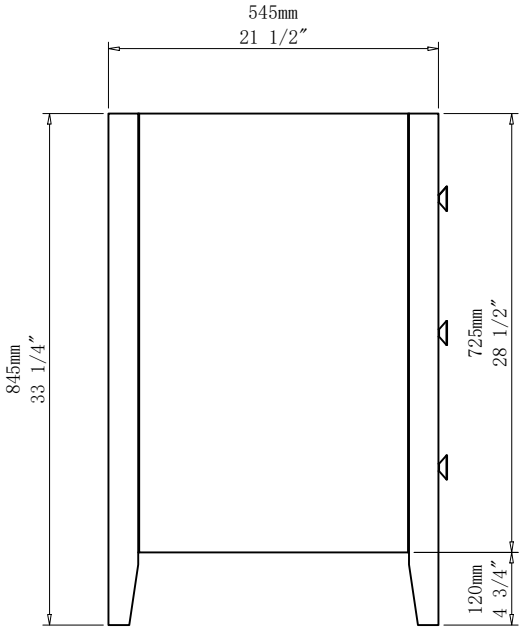

BLOSSOM®
luxury made simple

TORINO Vanities Specification

Features

- Solid wood construction and ply-wood case
- Soft-closing doors and full-extension soft closing Drawers with dovetail construction.
- Adjustable screws for legs (1/2")
- The cabinet wall fixing screw package

Vanities Dimension


V8050	24	24"x21-1/2"x33-1/4"
V8050	30	30"x21-1/2"x33-1/4"
V8050	36	36"x21-1/2"x33-1/4"
V8050	48	48"x21-1/2"x33-1/4"
V8050	60 S	60"x21-1/2"x33-1/4"
V8050	60 D	60"x21-1/2"x33-1/4"
V8050	72	72"x21-1/2"x33-1/4"

Item Number	Finishing	Pack Dimension	Gross Weight
V8050 24 35	WASHED GREY	27-1/8"x24-3/4"x38"	68 LBS
V8050 24 37	BLACK OAK	27-1/8"x24-3/4"x38"	68 LBS
V8050 30 35	WASHED GREY	33-1/8"x24-3/4"x38"	75 LBS
V8050 30 37	BLACK OAK	33-1/8"x24-3/4"x38"	75 LBS
V8050 36 35	WASHED GREY	39-1/8"x24-3/4"x38"	115 LBS
V8050 36 37	BLACK OAK	39-1/8"x24-3/4"x38"	115 LBS
V8050 48 35	WASHED GREY	51-1/8"x24-3/4"x38"	167 LBS
V8050 48 37	BLACK OAK	51-1/8"x24-3/4"x38"	167 LBS
V8050 60 35 S	WASHED GREY	63"x24-3/4"x38"	172 LBS
V8050 60 37 S	BLACK OAK	63"x24-3/4"x38"	172 LBS
V8050 60 35 D	WASHED GREY	63"x24-3/4"x38"	172 LBS
V8050 60 37 D	BLACK OAK	63"x24-3/4"x38"	172 LBS
V8050 72 35	WASHED GREY	75-1/4"x24-3/4"x38"	185 LBS
V8050 72 37	BLACK OAK	75-1/4"x24-3/4"x38"	185 LBS


BLOSSOM®
luxury made simple

TORINO Vanities Specification


Item Number	Match Top Code	Top Dimension	Top Material
V8050 24 35/37	CT5 2422 05C	25”x22”	White Engineered Stone
V8050 30 35/37	CT5 3022 05C	31”x22”	White Engineered Stone
V8050 36 35/37	CT5 3622 05C	37”x22”	White Engineered Stone
V8050 48 35/37	CT5 4822 05C	49”x22”	White Engineered Stone
V8050 60 35/37 S	CT5 6022 05SC	61”x22”	White Engineered Stone
V8050 60 35/37 D	CT5 6022 05DC	61”x22”	White Engineered Stone
V8050 72 35/37	CT5 7222 05C	73”x22”	White Engineered Stone

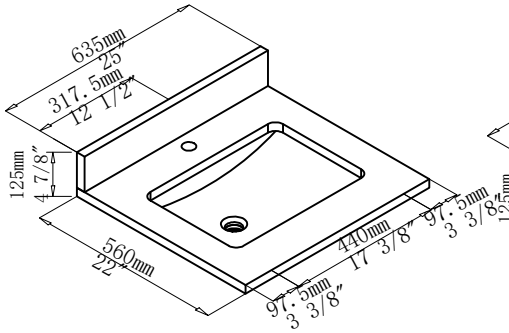


CT5 2422 05C

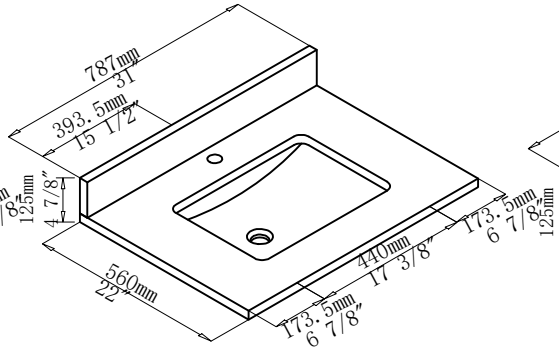


CT5 3022 05C

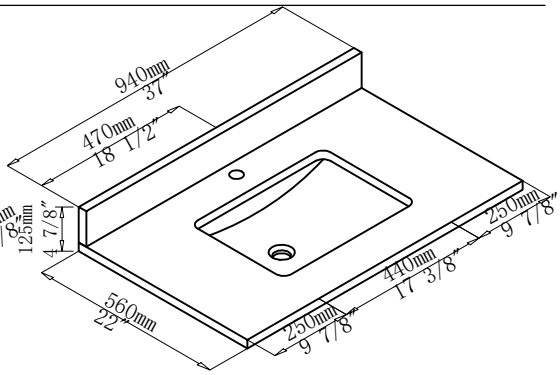


CT5 3622 05C

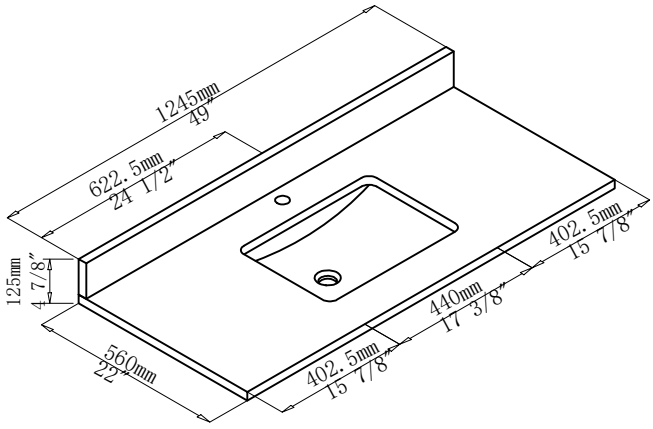


CT5 4822 05C

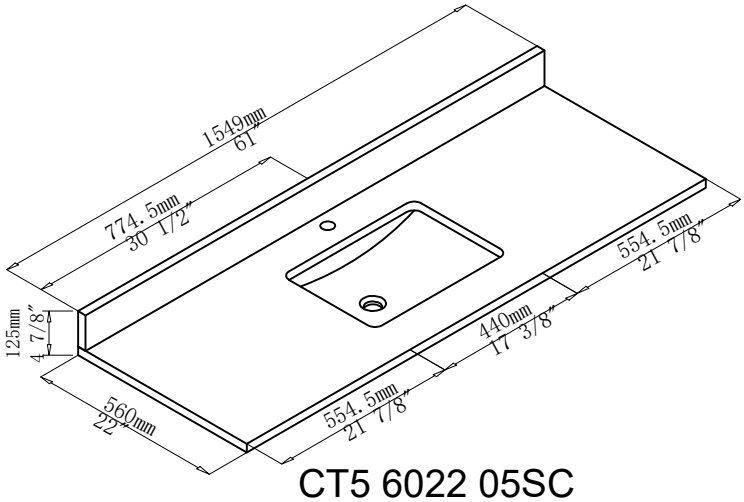

CT5 6022 05SC

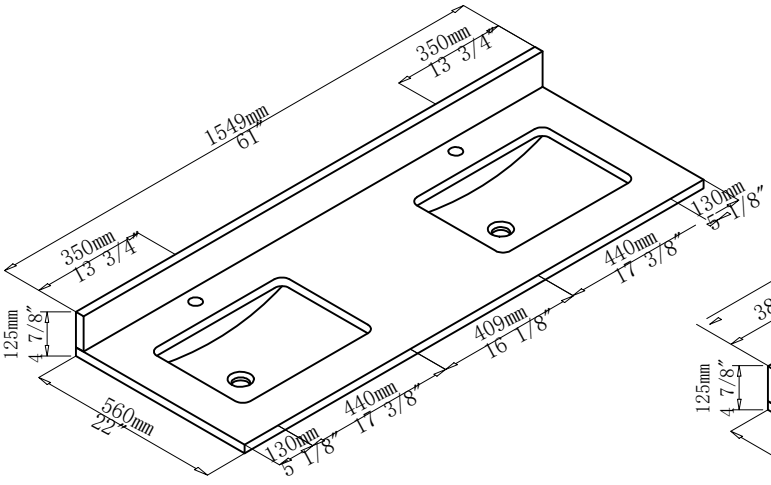

CT5 6022 05DC

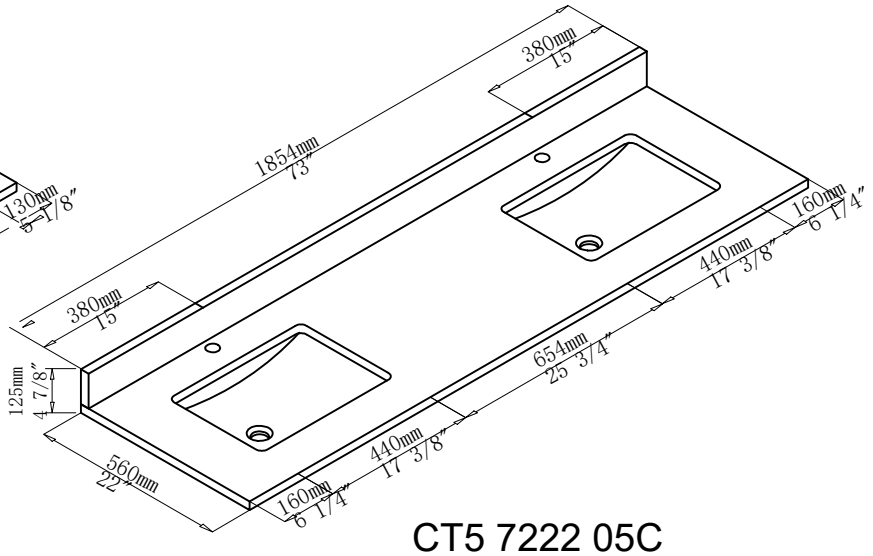


CT5 7222 05C


BLOSSOM
luxury made simple

TORINO Vanities Specification


Hardware			
No.		Draw	Qty
A	White rubber plug (Ø6mm)		2pcs
B	Screws (Ø 4 x 63mm)		2pcs
C	Stainless steel cover		2pcs

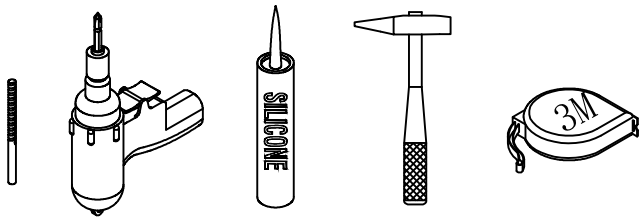


1 Mark the pre-drilled holes with a pencil or marker after positioning the vanity.

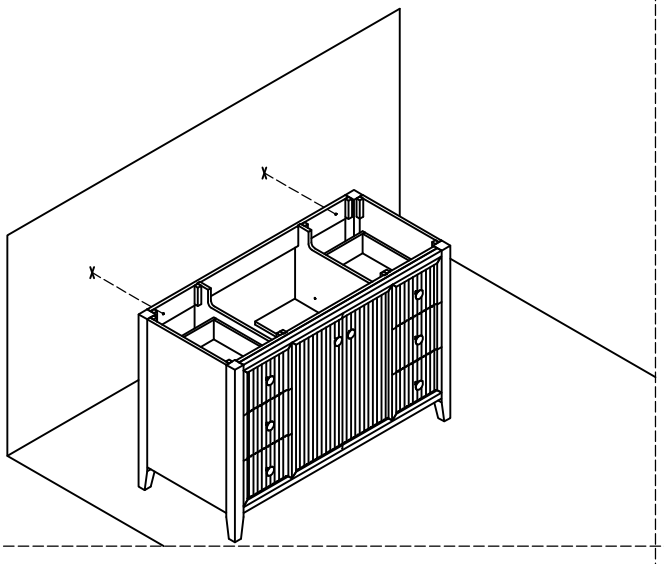


2 Drill the holes with suitable drill-bits base on different condition of the wall.

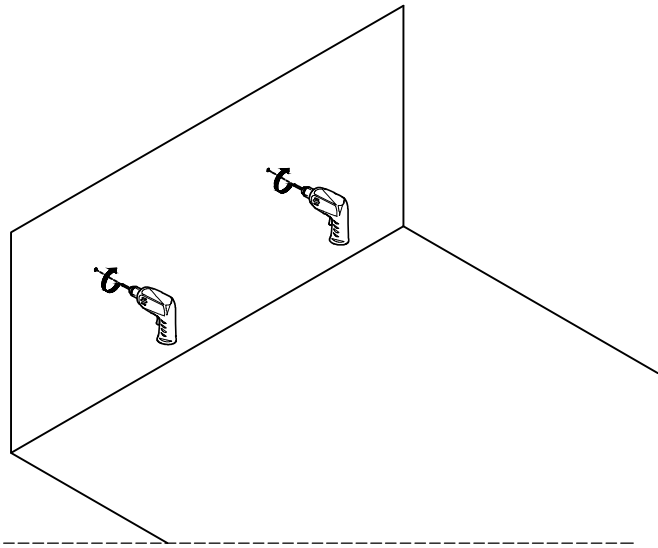


3 Hammer in the expansion plug.

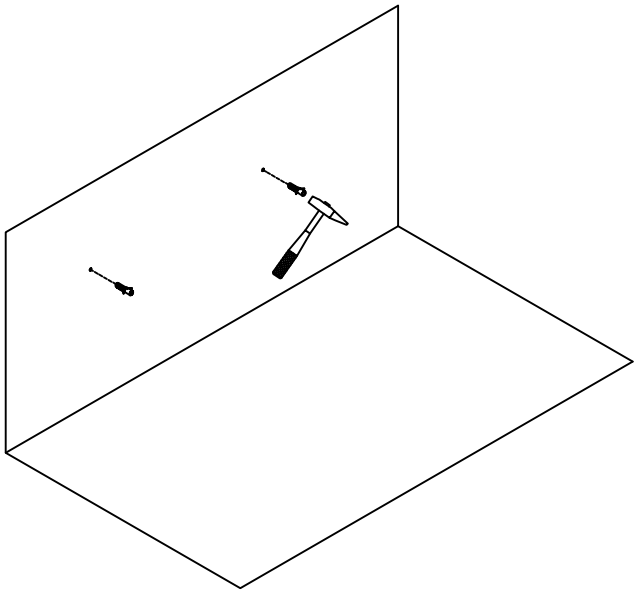


4 Secure the vanity onto the wall with screws.

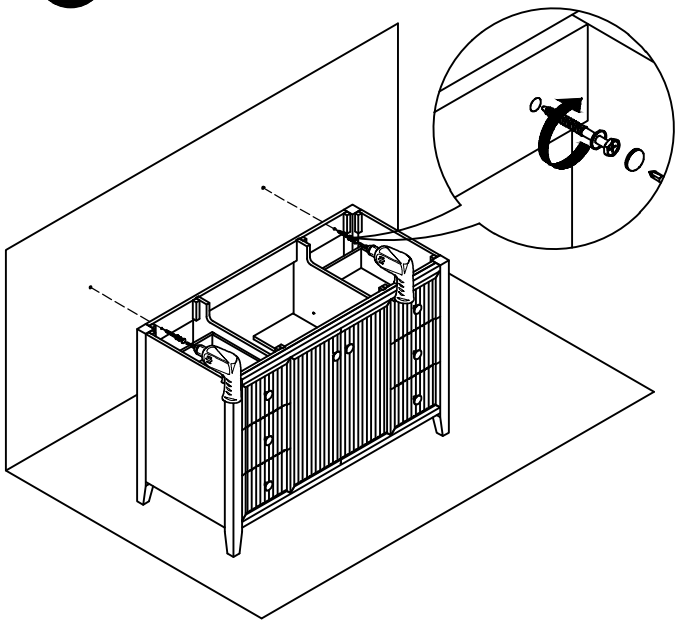


5 Install the basin with silicone.

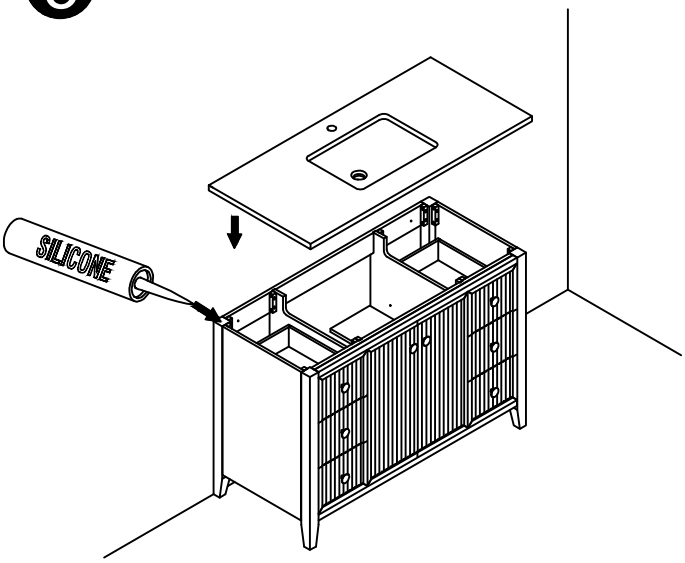

6 Install the backsplash with silicone.

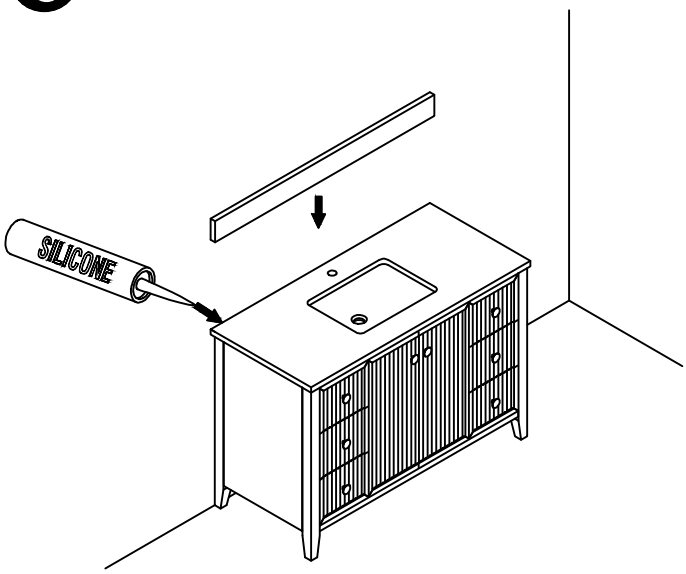

7 Installation complete.

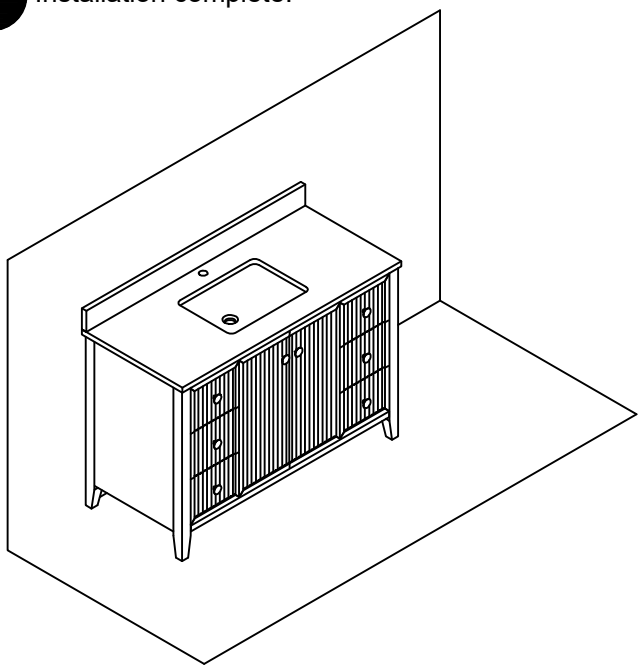

Suggestion:
Fix the faucet onto the top between 4 and 5

BLOSSOM
luxury made simple

Blossom
(718)-366-0088 | sales@BlossomUS.com | www.BlossomUS.com

For clarification , please contact us at (718)-366-0088 or sales@BlossomUS.com
All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.