




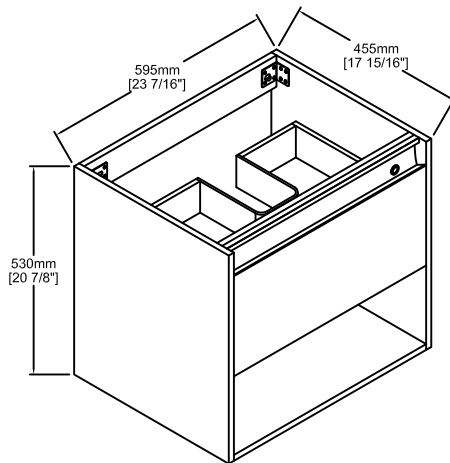

V8037 24

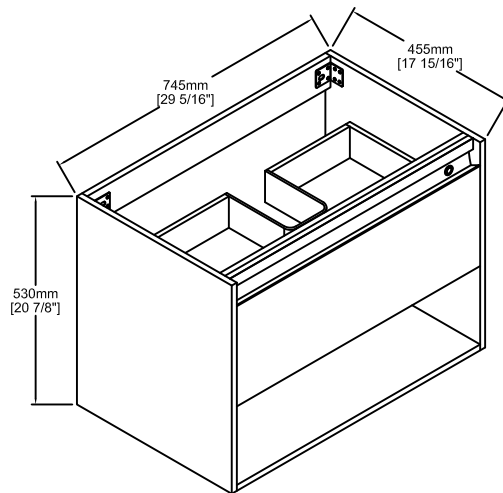

V8037 30

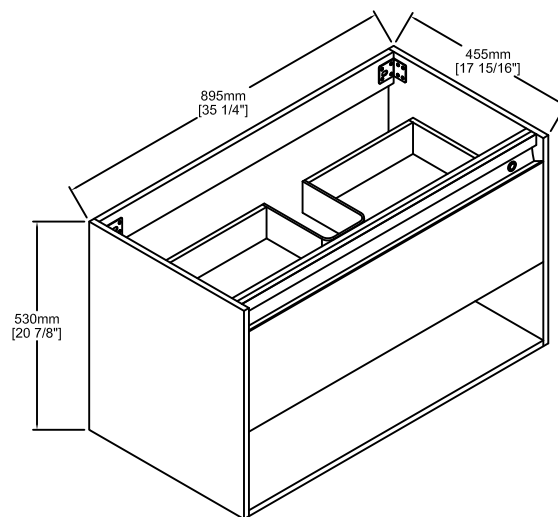

V8037 36

BERGEN
Series Vanities

Specification & Installation Guide

Features

- Modern design with melamine finishes.
- Soft-closing drawers.
- Compatible ceramic basins or artificial stone basins.
- Compatible matching mirror, medicine cabinet, LED Mirror, or LED medicine cabinet.
- Easy installation.

Package Dimension

24" 26-9/16"X 21-1/16"X 24"

30" 32-1/2"X 21-1/16"X 24"

36" 38-3/8"X 21-1/16"X 24"

Colors / Finishes

BROWN WALNUT - 11

CLASSIC OAK - 29

Gross Weight

24" 42 LBS



30" 44 LBS

36" 53 LBS

Sink Top Options



	Vanities	Ceramic basin	Artificial stone basin
24"	V8037 - 24	C04 2418	A10 2418 25
30"	V8037 - 30	C04 3018	A10 3018 25
36"	V8037 - 36	C04 3618	A10 3618 25

24" 23-7/16" x 17-15/16" x 20-7/8"

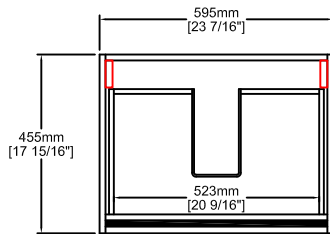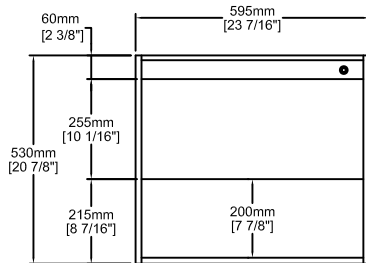



TOP VIEW

30" 29-5/16" x 17-15/16" x 20-7/8"

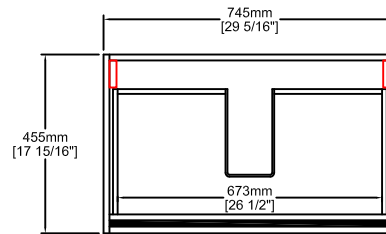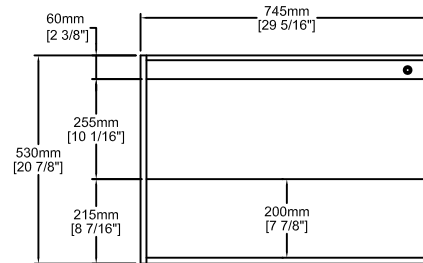


TOP VIEW

36" 35-1/4" x 17-15/16" x 20-7/8"

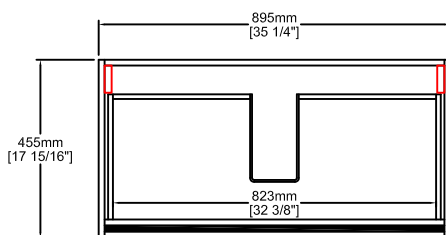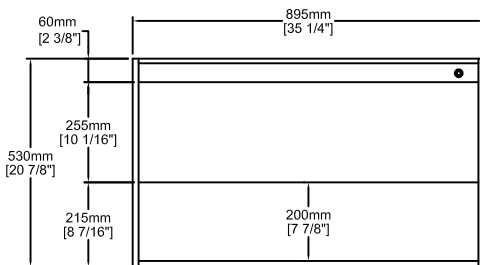


TOP VIEW

Side View

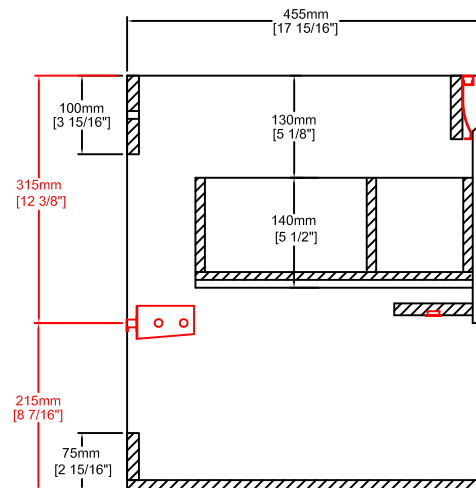


SECTION VIEW

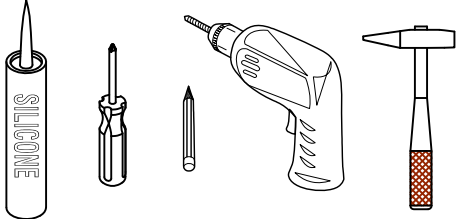Hardware				Tools (not includes)	
NO.		Draw	QTY		
A	White rubber plug(Ø6mm)		2		
B	Screws(Ø4 x 68mm)		2		
C	Stainless steel cover		2		
D	Leveling bracket		2		
E	Green rubber plug		6		
F	Screw		6		

Wall blocking is required for all installation

The suggested heights without the sink are 30-5/8" for Blossom Resin Basin, or 32-5/8" for Blossom Ceramic Basin.

Depending on the sinks selected, the total height will vary from 33-1/2"(850mm) to 35-1/4"(895mm). If an alternate height desired, adjust the rough-in and backing material heights using the dimensions provided.

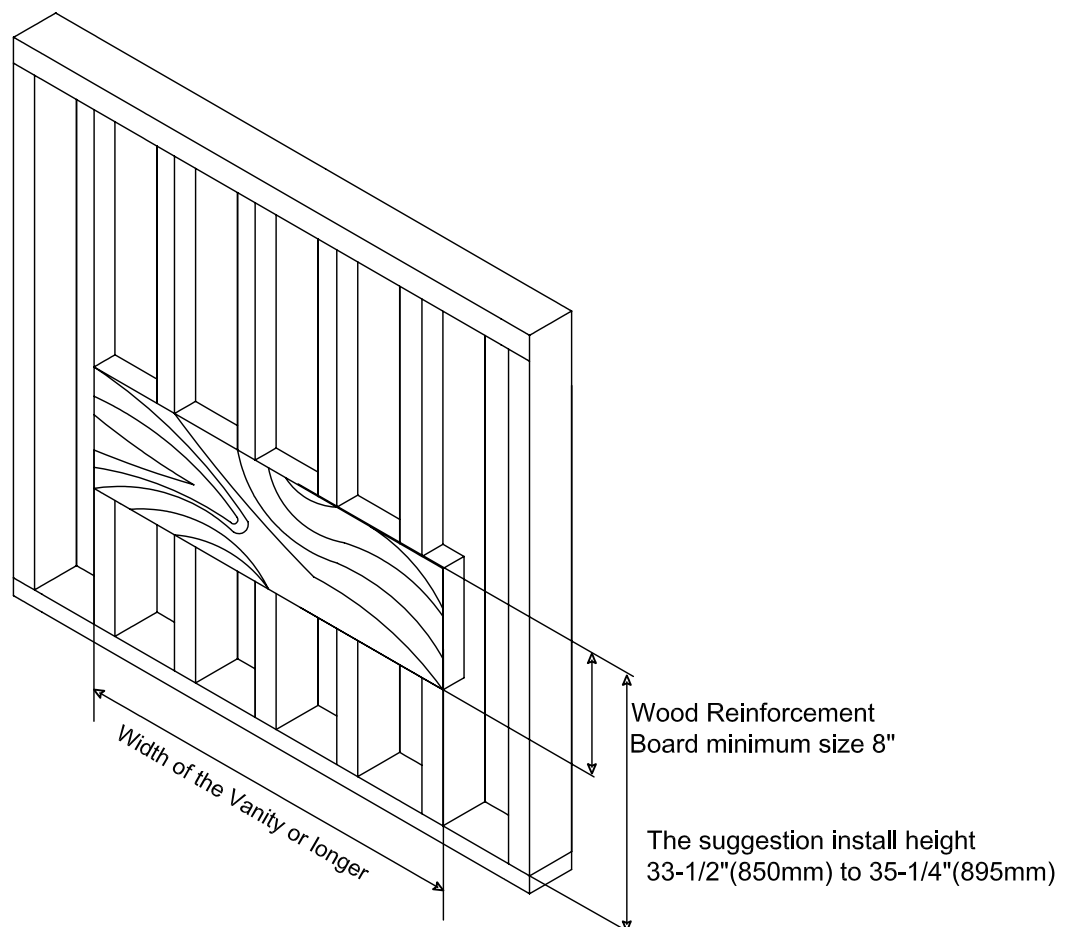


STEP 1

- Draw a punched position on the wall with a pencil.


Tip:

1. The suggestion height of the cabinet is 32-11/16" (830mm) - not including the basin.
2. The suggestion height of the upper hole is 30-11/16" (780mm).
3. The suggestion distance between the upper hole to the lower hole is 11-1/4" (285mm).

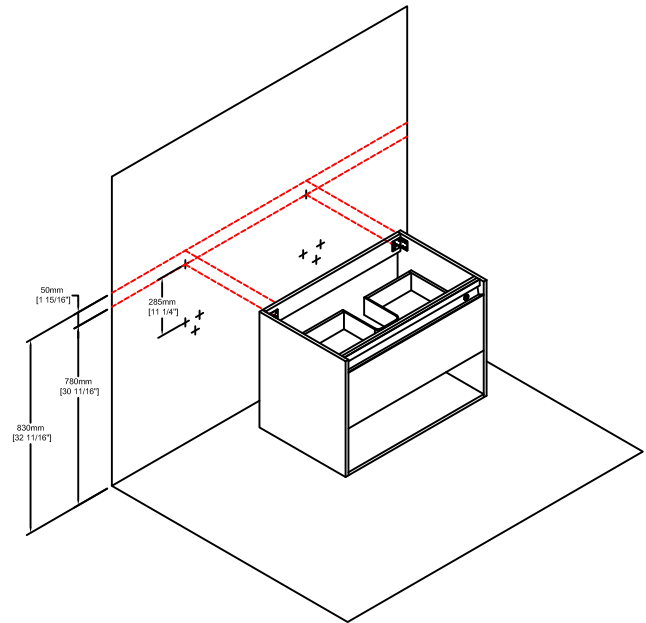


STEP 2

- Drill the holes with suitable drill-bits base on different condition of the wall.

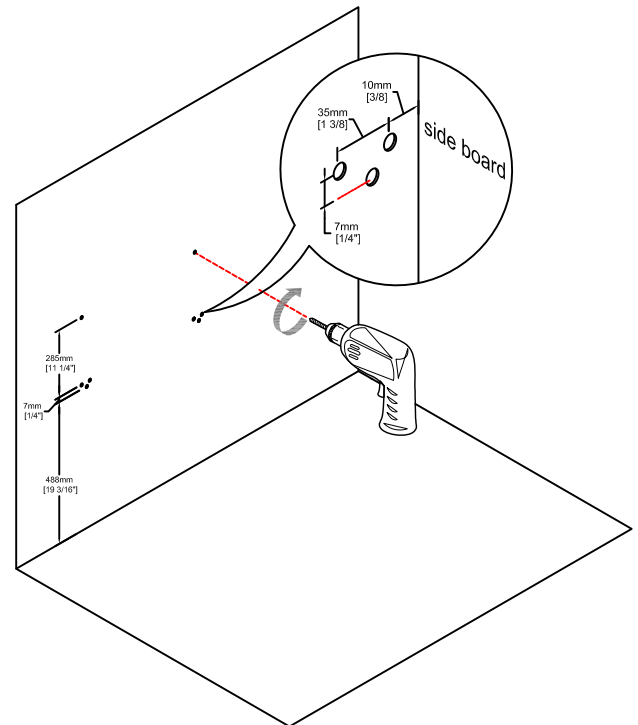


STEP 3

- Use a hammer to knock the white expansion rubber plug into the upper hole, and knock the green rubber plug into the three lower hole, align the hole in the wall and lock the leveling bracket to the wall with screws.

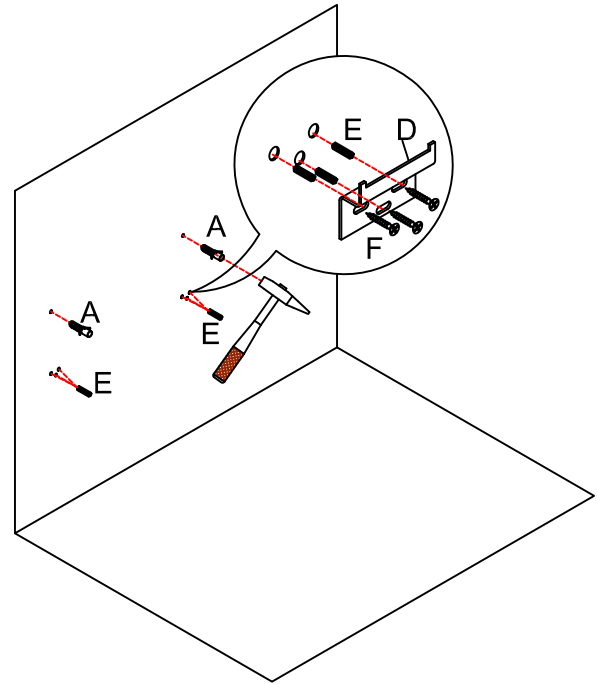


STEP 4

- Hang the accessories behind the cabinet on the leveling bracket. (As the picture shows).

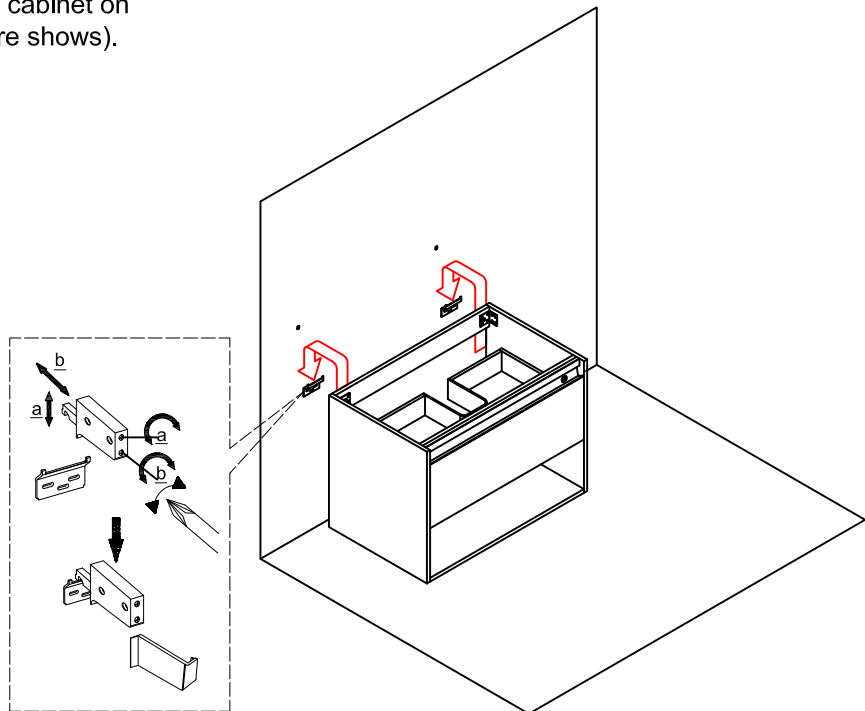


STEP 5

- Fix the cabinet to the wall with screw B and cover it with a stainless steel lid C.

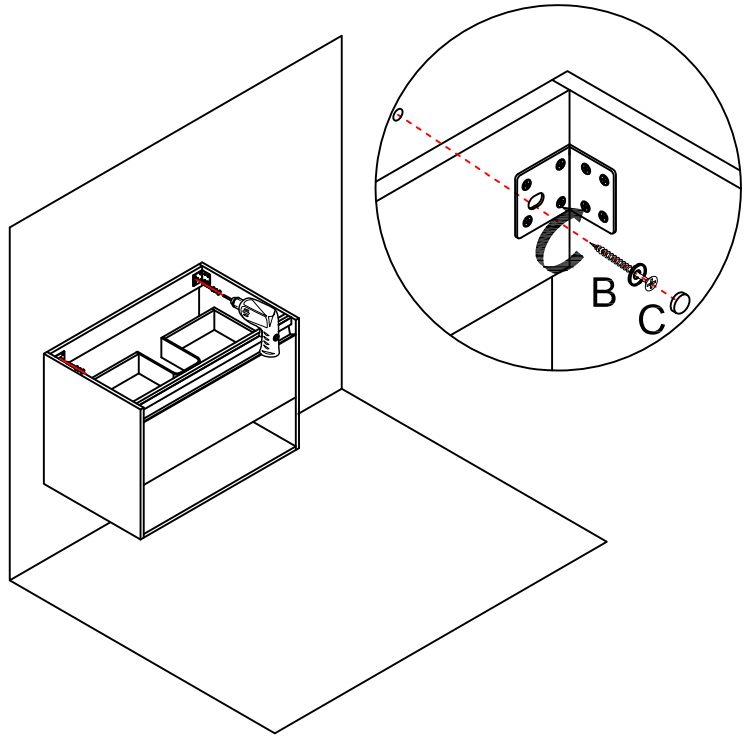

STEP 6

- Install sink top with silicone and finish.

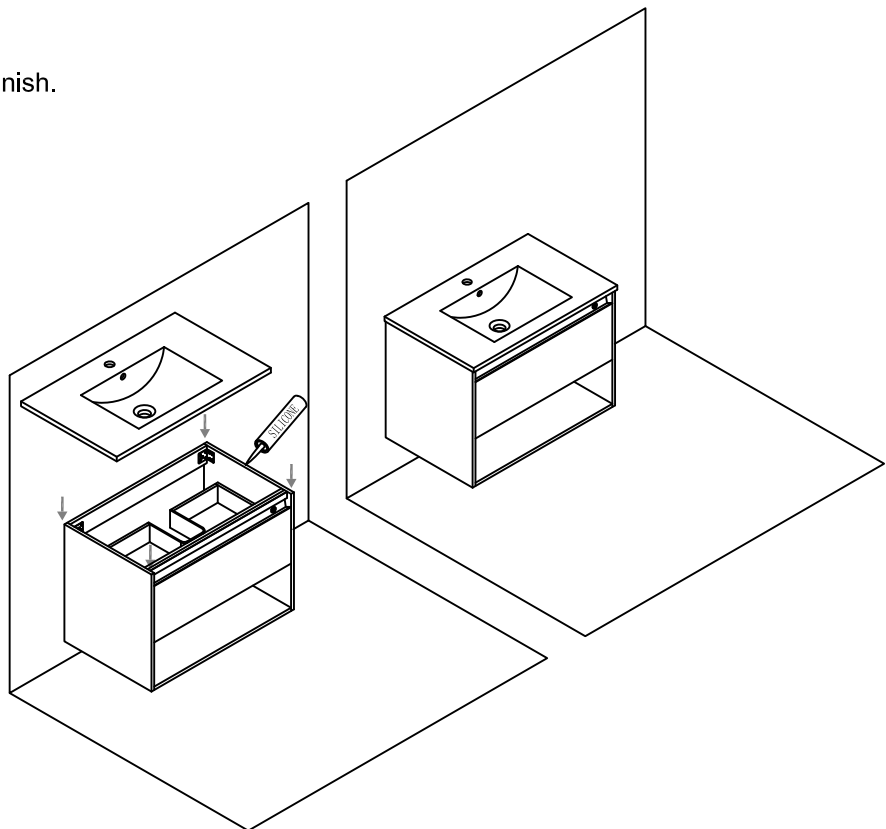



Blossom
(718)-366-0088 | sales@BlossomUS.com | www.BlossomUS.com

For clarification, please contact us at (718)-366-0088 or sales@BlossomUS.com
All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.